

Proficy™ HMI/SCADA

iFIX 4.0 with FIX Desktop

GETTING STARTED

Version 4.0
December 2005



All rights reserved. No part of this publication may be reproduced in any form or by any electronic or mechanical means, including photocopying and recording, without permission in writing from GE Fanuc Automation.

Disclaimer of Warranties and Liability

The information contained in this manual is believed to be accurate and reliable. However, GE Fanuc Automation assumes no responsibilities for any errors, omissions or inaccuracies whatsoever. Without limiting the foregoing, GE Fanuc Automation disclaims any and all warranties, expressed or implied, including the warranty of merchantability and fitness for a particular purpose, with respect to the information contained in this manual and the equipment or software described herein. The entire risk as to the quality and performance of such information, equipment and software, is upon the buyer or user. GE Fanuc Automation shall not be liable for any damages, including special or consequential damages, arising out of the user of such information, equipment and software, even if GE Fanuc Automation has been advised in advance of the possibility of such damages. The user of the information contained in the manual and the software described herein is subject to the GE Fanuc Automation standard license agreement, which must be executed by the buyer or user before the use of such information, equipment or software.

Notice

GE Fanuc Automation reserves the right to make improvements to the products described in this publication at any time and without notice.

© 2005 GE Fanuc Automation. All rights reserved. Microsoft is a registered trademark of Microsoft Corporation. Any other trademarks herein are used solely for purposes of identifying compatibility with the products of GE Fanuc Automation.

We want to hear from you. If you have comments, questions, or suggestions about our documentation, send them to the following email address:
doc@gefanuc.com

Table Of Contents

About This Guide	1
General Installation Information	1
Set-up Overview	2
Hardware Requirements	2
Recommended Computers	3
Memory Requirements	4
Disk Space Requirements	4
The Hardware Key	5
Installing the Hardware Key	5
License and Key Checking	6
Troubleshooting Hardware Key Installation	7
Replacing Defective Hardware Keys	8
Common Questions About Hardware Keys	8
Software Requirements	9
Third-Party Software Installed During the iFIX Install	10
Supported Regional Settings	10
Video Drivers	11
Using Third-party Video Drivers	11
Optimizing Virtual Memory	11
Running iFIX as a Service	12
Installing the iFIX Software	14
Installing the FIX Desktop Software	16
Online Registration	17
Using iFIX and FIX on the Same Computer	17
Installing iFIX 4.0 after Uninstalling iVisualize	18
Using iFIX with Microsoft Office	18
Backup Files	19
Optional Hardware	20
Upgrading from an Earlier Version of iFIX	20
Upgrading the iFIX 4.0 License	22
Preserving Settings when Upgrading to iFIX 4.0	23
Notes on Database Dynamos and Custom Programs that Run with iFIX Startup	23
SCU Files and the Upgrade	23
Title Bar in iFIX WorkSpace	25

Programs that Run as a Service with iFIX.....	25
Imported Toolbars	25
Standard vs. Classic Window Styles	26
Changing Permissions for PlugAndSolve and User Globals	26
Database Dynamos.....	26
Advanced Historian Not Supported with iFIX 4.0	26
Compatibility of iFIX 4.0 Pictures	26
Resolving iFIX Displays.....	26
Converting Pictures from FIX 7.x to iFIX	26
Running Pictures Created in an Older Version of iFIX	27
Using Code Written for Pictures in iFIX 2.1	27
iFIX Dynamo Sets	27
Deleting Temp Directory Contents if iFIX 4.0 Installation Fails	28
Upgrading from FIX 7.x	28
Preparing for the Upgrade to iFIX with FIX Desktop	28
Preparing the Recipe Files for the Upgrade	29
Preparing the I/O Drivers for the Upgrade.....	29
Checking the Environmental Protection Settings	30
Backing Up FIX Files.....	31
Exporting a Report of the Security Configuration	33
Adding Passwords to the .RPT File.....	33
Generating a System Configuration Report.....	34
Overview of Steps to Upgrade from FIX 7.x.....	35
Update Database Dynamos	36
Install the Newest Drivers and iFIX Product SIMs.....	36
Copy the Backed Up Files into the New Product Folder	37
Import the FIX I/O Driver Configuration Information	38
Verify the I/O Driver and Database Migration.....	40
Import the Recipes Files.....	40
Import the Security Configuration.....	41
Reconfigure the Application Features and Passwords for Each User	42
Identical Application Features in FIX32 and iFIX with FIX Desktop	43
FIX32 Application Feature Names That Are Different After the Upgrade	44
FIX32 Application Features No Longer Available After the Upgrade	45
New Application Features Available for iFIX Users	46
Redefine SCADA Failover Settings.....	47
Understanding Failover Options After Upgrading.....	48

Example of Failover Option One	49
Steps To Configure Failover Option One	49
Example of Failover Option Two	50
Steps To Configure Failover Option Two	51
Enable Environmental Protection	52
Understanding Environment Protection in iFIX.....	53
Steps to Enable Environment Protection.....	54
Understanding Environment Protection.....	55
Setup the Report Generator	56
Other iFIX Installation Considerations.....	57
Supported Drivers	57
Special Keyboard Buttons	57
Networking	57
Supported Networks.....	58
Supported File Servers.....	58
Handling Time Zones when Using Networked FIX 6.15 and iFIX Nodes	59
Networking with Other iFIX and FIX Nodes.....	59

About This Guide

Welcome to iFIX®! Thank you for taking the time to install and use iFIX.

Before you begin installing our product, please take some time to review this Getting Started guide. The guide includes information about the following:

- Installing iFIX
- Upgrading from earlier versions of iFIX
- Supported networking components

Reference Documents

For more information on the System Configuration Utility, troubleshooting your set-up, working with the Proficy iFIX WorkSpace, or setting up a process database or SCADA system, please refer to the following electronic books:

- Setting Up the Environment
- Understanding iFIX
- Building a SCADA System

General Installation Information

This chapter provides general information you need in order to install iFIX including:

- Hardware requirements, including required computer hardware, recommended computers, required memory, and required hard disk space.
- Installing the hardware key and replacing defective keys.
- Installing iFIX or iFIX with FIX Desktop.
- iFIX software requirements, including operating systems, supported regional settings, video drivers, optimizing virtual memory, and running iFIX as a service.
- Optional installation features, including online registration, and installing optional hardware.
- Installing iFIX with other applications including FIX32®, and Microsoft® Office.

Set-up Overview

When you are ready to begin setting up your iFIX environment, use the following steps to set up your nodes.

► **To set up your nodes:**

1. Set up each computer you require. Use the *Hardware Requirements* section as a guide and refer to the user manual that accompanies each computer for detailed setup information.
2. Install and optimize Microsoft Windows on each computer as needed. Also make sure you create a login account with administrator rights so you can install iFIX later. For instructions on optimizing Windows, refer to the *Optimizing Virtual Memory* section.
3. Set up the network adapters and network software required for each computer. Refer to the *Networking iFIX Nodes and Advanced Topics* chapters of the *Setting Up the Environment* electronic book for more information.
4. Install iFIX and any other hardware you may have purchased. Refer to the *Installing the iFIX Software* section for instructions on installing iFIX and your hardware key. For information on installing other hardware, refer to the that product's documentation.
5. Configure iFIX on each computer. Make sure that the user installing iFIX is a member of the Administrators Windows group. Refer to the *Configuring iFIX Using the SCU* chapter of the *Setting Up the Environment* electronic book for more information on configuring iFIX.

Hardware Requirements

The minimum iFIX hardware requirements are:

- A minimum Pentium 3-based 733 MHz computer. For optimum performance, GE Fanuc recommends a Pentium 4-based 1 GHz computer. For a list of machines tested by GE Fanuc, refer to the *Recommended Computers* section.
- A minimum of 128MB RAM for SCADA servers and iClients. Refer to the *Memory Requirements* section for more information.
- A minimum of 250MB of free hard drive space to install a typical iFIX system, including pictures, databases, alarm files, and other data files.

iFIX alarm and historical data files grow dynamically. If you plan to perform extensive alarm or data collection on a node, you may need more disk space on that particular node.

Other GE Fanuc products, such as Proficy Plant Applications, Proficy Historian, and Proficy Real-Time Information Portal, impose additional requirements. Refer to the Important Product Information (IPI) topic in the product's electronic books for specific system requirements. Click the System Req. tab in that product's IPI for details.

- A CD-ROM drive.
- NETBIOS-compatible or TCP/IP-compatible network interface adapter for network communication and certain I/O drivers.

NOTE: *Because Microsoft does not support NetBIOS on Windows XP or Windows Server 2003, iFIX installed on Windows XP or Windows Server 2003 also does not support NetBIOS.*

- One parallel port or free direct-connect USB port. Some touch screens, pointing devices, and I/O drivers require a serial port. Additional ports for I/O hardware should be ordered with the computer.
- SVGA or better color graphics monitor and a 100% IBM-compatible, 24-bit graphics card capable of 800x600 resolution and at least 65,535 colors.
- Two-button mouse or compatible pointing device (such as a touch screen).

Recommended Computers

iFIX has been tested by GE Fanuc on the following machines that were running Windows 2000, Windows XP, and Windows Server 2003:

- Compaq Deskpro
- Compaq EVO D500 (Desktop 500 Minitower)
- Dell Dimension
- Dell Optiplex GX1
- Dell Optiplex GX110
- Dell Optiplex GX200
- Dell Optiplex GX280
- Dell Precision 340
- Dell Precision 470 Dual Xeon
- Dell Precision 530 Dual Xeon
- Dell Precision Workstation 420MT
- Dell Precision Dual

- IBM NetVista
- Micron Millennia
- ElectroVaya Scribbler SC 2100 Tablet PC (Microsoft Windows XP Tablet Edition, iClient Only)

While GE Fanuc cannot guarantee the integrity of any computer, our testing has shown a higher potential for problems with the economy lines of computers on the market. Because of these problems, GE Fanuc does not recommend the use of value or economy type computers with iFIX. Instead, GE Fanuc recommends you invest in the higher end (premier) line of computers when purchasing computer hardware.

Memory Requirements

iClients and SCADA nodes require at least 128MB RAM. This configuration provides enough memory to run iFIX applications.

***NOTE:** As more applications run simultaneously on a SCADA server, performance decreases. Whenever possible, run additional applications on different computers.*

If the size of your process database is over 1MB, add 1 megabyte of memory for each megabyte of database size. For example, if your database is 2MB in size, your SCADA server requires 126MB minimum ($126+2=128$).

If your picture cache size increases, your memory requirements should increase:

- 2 to 3 times the file size for each picture that does not include bitmaps and controls.
- 3 to 4 times the file size for each picture that includes bitmaps and controls.

For example, a 2 megabyte file that does not include bitmaps and controls requires a 4 to 6 megabyte increase in memory. A 2 megabyte file that includes bitmaps and controls requires an increase in the memory of 6 to 8 megabytes.

Disk Space Requirements

The Proficy iFIX WorkSpace checks to make sure you have at least 10 MB of disk space when you save a picture or a schedule. If there is insufficient disk space, the WorkSpace may react unpredictably and you may lose your work.

To help minimize this problem, the WorkSpace warns you if you have less than 10 MB of disk space available. Although you can continue loading the software, we recommend that you stop iFIX, free some disk space, then restart. Otherwise, the WorkSpace may become unstable.

The WorkSpace examines the iFIX Picture path and the Windows TEMP path when it starts. If you change either path so that they reference different drives, for example, D:\Program Files\GE Fanuc\Proficy iFIX and C:\Temp, the WorkSpace requires 10 MB on each drive.

You may find that 10MB is not enough space to protect against instability during file save operations. You can increase this threshold by changing the FreeDiskSpace parameter in the FixUserPreferences.ini file. This parameter sets the minimum amount of space that the WorkSpace requires in bytes. By default, the parameter is set as follows:

```
[AppRunPreferences]
FreeDiskSpace=10000000
```

► **To change FreeDiskSpace parameter:**

1. Shut down the WorkSpace.
2. Locate the FixUserPreferences.ini file in the Local path.
3. Open the file with a text editor, and change the FreeDiskSpace parameter to the amount you want.
4. Save the .INI file and restart the WorkSpace.

The Hardware Key

Two types of hardware key are currently offered: one that supports parallel port configurations, and a key that supports USB port configurations. The hardware key you use to run iFIX:

- Controls and enables software options available to your installation.
- Uses a utility to electronically reprogram options you choose to upgrade or change (for HASP M1 or M4 keys only).

iFIX runs in demo mode for two hours if the key is not installed or found. Hardware keys from version 2.5 and older will not work with the current version of iFIX. The iFIX 2.6 SuperPro keys also do not work with iFIX 4.0. iFIX 4.0 only supports HASP M1 and M4 keys.

NOTES:

- *In some cases, an electronic file update is not available for reprogramming your key.*
- *If you want to upgrade an earlier version of iFIX that came with a Rainbow SuperPro or C++ key, you will need to exchange your key for new one. Typically, this includes SuperPro keys from iFIX 2.6, and any 2.5 or earlier release.*
- *Additionally, if you want to upgrade iFIX to run with other Proficy products, such as Proficy Change Management or Proficy Plant Applications, you will also be required to exchange your hardware key for a new M4 key.*
- *You can exchange the older key by contacting your iFIX sales representative.*

Be sure to file your hardware key packing slip in a safe location. The codes on this slip are necessary for GE Fanuc to quickly duplicate the key in case it is damaged or misplaced. You can verify that your serial number matches the serial number on the hardware key packing slip by using the iKeyDiag or the Proficy License Viewer utility to detect and display your hardware key settings. For more information, see the *License and Key Checking* section.

Installing the Hardware Key

A hardware key is included with your iFIX software. You must install your hardware key in order to access all the components of the iFIX software you purchased.

Typically, you install your hardware key as you install the iFIX product. Refer to the *Installing the iFIX Software* section for more details. If you are upgrading from a previous version, you usually run the electronic licensing update file for your key before installing the newer version of iFIX.

If you insert the key after you install iFIX, it should be detected automatically when iFIX starts. It is recommended that you shutdown your computer before plugging in a new hardware key.

IMPORTANT: Do not remove the hardware key from your node while iFIX is running. If you do, iFIX features will shut down and you will need to restart iFIX. You may also damage the hardware key if you remove it while iFIX is running.

GE Fanuc supports the installation of the USB port hardware key only on systems running Windows 2000, Windows XP, or Windows Server 2003. At this time, GE Fanuc does not support USB keys connected through an external USB hub.

On new installs on Windows XP SP1, GE Fanuc recommends that you insert your USB key after you run the iFIX install.

License and Key Checking

To use iFIX and other GE Fanuc products, you must purchase the product with the desired options from GE Fanuc. Depending on the options you buy, you may need to replace your current key or run an update program on your existing key to enable the options. If you are upgrading from an earlier version of iFIX, you will also need to update or replace your key.

If you want to determine the options that are enabled on the computer you are currently working on:

- For older keys (M1 HASP keys), use the GE Fanuc iKeyDiag utility to view the options enabled.
- For newer keys (M4 HASP keys), use the Proficy License Viewer to view the options enabled.

NOTE: If you try to run iKeyDiag and a newer key is installed, an error message appears. Similarly, if you try to run the Proficy License Viewer when an older key is installed, an error message appears. Should an error message appear, try starting the other utility to view the enabled options.

TIP: Both the iKeyDiag or the Proficy License Viewer programs can be used to provide technical support personnel with information about your iFIX hardware key.

► To use iKeyDiag to determine the enabled options:

1. Click the Start button and then point to Run. The Run dialog box appears.
2. In the Open field, enter iKeyDiag.
3. Click OK. The iKeyDiag utility appears.

IMPORTANT: If you run iKeyDiag while running the Sample System, the information displayed will reflect settings on a demo key, rather than the actual settings of your hardware key. To see your hardware key settings, close the Sample System before running iKeyDiag.

4. Click the iFIX tab to view the installed product options.

For information on upgrading your key to include other options, contact GE Fanuc. You may need to use the iKeyUpdate utility to update your key, or obtain a new key to add options or work with other Proficy products.


NOTE: The *key_report.txt* file generated by iKeyDiag is used only by GE Fanuc Technical Support; in localized versions, its content remains in English.

► **To use the Proficy License Viewer to determine the enabled options:**

1. From the Start menu, point to Programs, Proficy Common, and then License Viewer. The License Viewer appears.
 2. In the Proficy Products list, select the iFIX product. The License and Key Diagnostics area should now display the iFIX options.
- For information on upgrading your key to add other options, contact GE Fanuc. GE Fanuc will provide the steps for upgrading your Proficy license file when you purchase new options or products.

Troubleshooting Hardware Key Installation

If the hardware key does not install properly, you may find that even though you have followed the installation directions for your hardware key, you see the following message at iFIX startup:

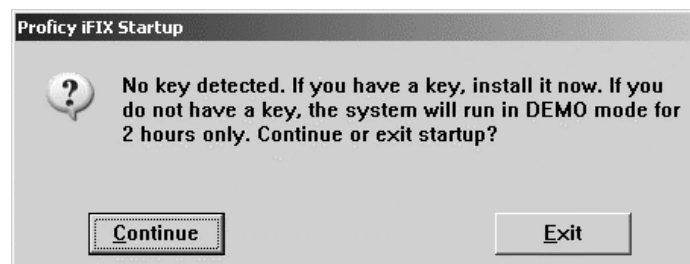

Message when No Key is Detected

First, check to see that your hardware key is firmly attached. Next, uninstall and reinstall the driver for the hardware key. If this driver has been incorrectly uninstalled, it may behave unpredictably.

Troubleshooting the Aladdin HASP USB Key...

If the Aladdin HASP USB key does not appear to be working, you can reinstall the licensing to recover from the improper install. When the Aladdin HASP key is not communicating correctly, you will notice that the indicator light at the end of the key is off.

NOTE: iFIX 4.0 supports two types of HASP keys: the M1 and M4 keys. If you upgrade an iFIX 3.5 computer with a HASP key, the HASP key is typically an M1 key. However, if you want to run iFIX with other Proficy products, such as Proficy Change Management, you will need to upgrade to an M4 key. For new iFIX 4.0 installs, the HASP key is typically the M4 key.

► **To reinstall the GE Fanuc Proficy Licensing if you have an M1 key:**

1. Reinstall the licensing by clicking the M1Licensing.exe file in the License folder on the iFIX product installation CD.
2. Click Finish when the licensing install completes.

► **To reinstall the GE Fanuc Proficy Licensing if you have an M4 key:**

1. Reinstall the licensing by clicking the ProficyClientInstaller.exe file in the License folder on the iFIX product installation CD.
2. Click Finish when the licensing install completes.

Replacing Defective Hardware Keys

A defective hardware key causes your Proficy product to run in Demo mode. In iFIX, that means you will only be able run in iFIX in DEMO mode.

Be sure to check that the key is firmly attached to your USB or parallel port before assuming it is defective. Additionally, for USB keys, if the indicator light at the end of the key is off, then the key is not communicating correctly.

You can also use the License Viewer (for M4 keys) or iKeyDiag (for M1 keys) to determine if the hardware key is defective. If your hardware key is defective, the License Viewer or iKeydiag does not display the proper enabled options. Or, an error message stating that a hardware key is required to view the enabled options may appear. For more information on using the License Viewer or iKeyDiag, refer to the *License and Key Checking* section.

GE Fanuc replaces defective keys as quickly as possible. To obtain a replacement hardware key:

- Call your local GE Fanuc technical support representative. The support representative will instruct you to FAX a completed copy of a Merchandise Return Authorization form. On receipt of the form, GE Fanuc can program a new hardware key and send it to you overnight.
- When you receive the hardware key, you must return the old one along with a copy of the form sent with the new hardware key. GE Fanuc reserves the right to invoice you for defective hardware keys that are not returned.

Common Questions About Hardware Keys

This section describes some frequently asked questions about iFIX hardware keys.

What's the Difference Between the HASP and SuperPro Keys?

The Aladdin HASP (M1 or M4) key is the newer hardware key that is provided with the iFIX 4.0 product. iFIX 2.6 first released with the SuperPro key, but later offered the HASP M1 key in 2002. All iFIX releases after 2.6 include support for the M1 key. iFIX 4.0 is the first iFIX release to offer the M4 key. iFIX 4.0 supports only the M1 and M4 keys.

The Rainbow SuperPro (Sentinel) USB Key was first offered in iFIX 2.6. It was also supported in iFIX 3.0 and 3.5. If you are upgrading from one of these releases, you may have a SuperPro key. These keys must be exchanged for newer keys if you want to upgrade to iFIX 4.0. The SuperPro USB key is a lighter purple than the newer keys.

The version and type of key you have should appear imprinted on the outside of the key. If you do not know the type of key you have, read the label on the physical key.

What Does the Light At the End of the USB Key Indicate?

For the Aladdin HASP USB Key, the light indicates that the key and the software are communicating. If this light is off, it indicates a problem with the key.

For the Rainbow SuperPro USB Key, the light simply means that it is plugged in. It does not indicate if it is running correctly. This key is not supported in iFIX 4.0.

If I Move the USB Key To Another Port Is It Automatically Detected?

Yes. The USB key is automatically detected when moved to another USB port. There are no additional screens requesting software to be installed for the Aladdin HASP USB key.

Software Requirements

The minimum iFIX with FIX Desktop software requirements are:

- One of the following operating systems:
 - Microsoft® Windows® 2000, Professional or Advanced Server Edition, with at least Service Pack 4 required.
 - Microsoft® Windows® XP Professional, Service Pack 1 or greater. Since Windows XP has continuous updates, you should run the Windows update feature to get the latest software.
 - Microsoft® Windows® Server 2003, Standard or Enterprise Edition. Since Windows Server 2003 has continuous updates, you should run the Windows update feature to get the latest software.
 - Microsoft® Windows® XP Tablet Edition, iClient Only.
- Network interface software for network communication and certain I/O drivers.

NOTE: Microsoft discontinued support for NetBEUI in Windows XP and Windows Server 2003. For more information on the discontinued support, beginning with Windows XP, refer to Microsoft Knowledge Base article Q306059.

- An I/O driver for SCADA servers. GE Fanuc supplies I/O drivers for many programmable controllers or you may purchase a driver separately. Be certain that the I/O driver you purchase is compatible with your hardware. Contact your GE Fanuc Sales Representative or visit the GE Fanuc web site at <http://www.gefanuc.com> for the latest list of drivers and supported hardware.
- Internet Explorer 5.5 or higher.
- If relational database software is used with iFIX: Microsoft® SQL Server 2000 (SP2 or higher), Oracle® 9i (or higher), or Microsoft® Access 2000 (or higher).

NOTE: Microsoft Access is supported for local installs only.

Third-Party Software Installed During the iFIX Install

Please note that the following third-party software is automatically installed with iFIX:

- Microsoft® VBA 6.4
- Microsoft® Data Access Components (MDAC) 2.8 – on Windows 2000 computers only

NOTE: *Microsoft Windows XP and Windows Server 2003 already include MDAC, so MDAC is not installed with iFIX in these scenarios. You can use the Windows Update Service to update the version of MDAC on these operating systems.*

If the versions of MDAC or VBA on the iFIX CD are newer than the versions on your computer, then the iFIX install updates the ones on your computer, with the exception of MDAC on a Windows XP or Windows Server 2003 computer. In this case, no MDAC updates occur. You must obtain the latest service pack to update your version of MDAC.

If the versions of MDAC or VBA on your computer are newer, then the iFIX install does not update them. iFIX uses the most recent versions already on your computer instead.

Supported Regional Settings

iFIX supports the following regional settings available in the Windows Control Panel:

- Decimal symbol - one character
- Digit grouping symbol
- List separator - one character
- Time style
- Time separator
- Short date style
- Date separator

NOTE: *The decimal symbol and the digit grouping symbol cannot be the same character. Also, the time separator and the date separator cannot be the same character.*

Formatting the Time and Date

Avoid changing the time style or short date style in regional settings to values that are outside of the standard styles provided. Changing these values to non-standard styles may result in improperly formatting times and dates in some parts of iFIX.

iFIX supports the following short date formats, some of which may not be available in certain language versions of Windows:

- dd/mm/yy, or dd/mm/yyyy
- dd/yy/mm, or dd/yyyy/mm

- mm/dd/yy, or mm/dd/yyyy
- mm/yy/dd, or mm/yyyy/dd
- yy/dd/mm, or yyyy/dd/mm
- yy/mm/dd, or yyyy/mm/dd

Formatting the Regional Language Setting

Avoid changing the language setting once a timer has been used in a schedule. If changed, the date always reverts to 30/12/99, regardless of what you set the start time to be.

Setting the System Default Locale

The selected locale must be set as the system default.

Video Drivers

After much testing, GE Fanuc has found that some video drivers have unique problems that are apparent only when using these drivers. Additionally, GE Fanuc has found that many problems with video drivers occur in both iFIX applications and common applications, such as Excel and Word.

If you are experiencing problems with your video driver, try using it in a different mode to find out if the problem is unique to a specific configuration.

Using Third-party Video Drivers

If you need to use a third-party driver, please use the following guidelines to resolve any problems you may experience:

- Contact the manufacturer to ensure you have the latest version of the video driver. GE Fanuc has found that the latest version of third-party video drivers can fix some problems.
- If the latest version of the video driver does not fix the problem, notify the video driver manufacturer to see if they are aware of the problem.
- If all else fails to resolve the problem, contact GE Fanuc Technical Support.

Optimizing Virtual Memory

Through the use of paging files, Windows allocates space on your hard drive for use as if it were actually memory. This space is known as virtual memory. The following steps describe how to optimize virtual memory in Windows to achieve maximum performance from iFIX.

► To optimize the virtual memory paging file for iFIX in Windows:

1. From the Windows Control Panel, open the System item. The System Properties dialog box appears.

In the Windows 2000 System Properties dialog box, click the Advanced tab, then select Performance Options.

In the Windows XP System Properties dialog box, click the Advanced tab, then in the Performance group box, select Settings. In the Performance Options dialog box, click the Advanced Tab.

In the Windows Server 2003 System Properties dialog box, click the Advanced tab, then select Performance Options.

3. In the Virtual Memory group box, select Change.
4. In the Initial Size field, enter a value equal to three times your physical memory.
5. In the Maximum Size field, enter a value equal to three times your physical memory.
6. Select Set.
7. Click OK to save the changes and exit the dialog box.

NOTE: *If the paging file is set to grow dynamically, your system may experience severe performance problems during runtime. To ensure optimal performance, be sure that the Initial Size and Maximum Size of the paging file are the same so that the paging file does not grow dynamically.*

Running iFIX as a Service


If you are running iFIX as a service, please take note of the following information.

Windows Services

Do not stop the iFIX service or make changes to the iFIX configuration from the Services control panel. This applies to iFIX running on any operating system.

► To enable iFIX to run as a service:

1. Start the SCU.
2. On the Configure menu, click Local Startup. The Local Startup Definition dialog box appears.
3. In the Service area, select the *Continue running after logoff* check box, as illustrated in the following figure. This configures iFIX to run as a service when you start iFIX.

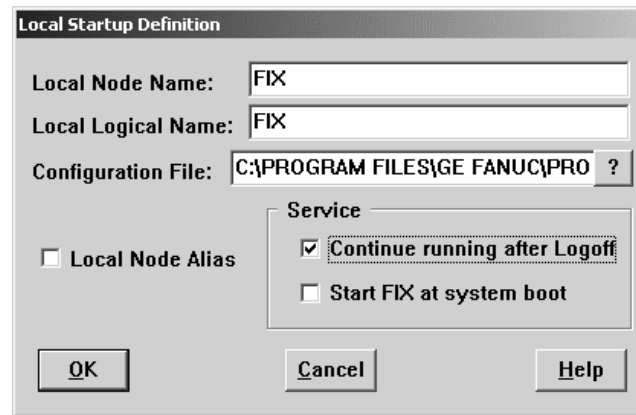

4. Additionally, if you want to start iFIX whenever you start Windows, select the *Start iFIX at system boot* check box.
- The Start iFIX at system boot option is available only when the Continue running after Logoff option is selected.
5. Click OK.
6. Exit the SCU.
7. Restart iFIX.

► **To disable iFIX from running as a service:**

1. Start the SCU.
2. On the Configure menu, click Local Startup. The Local Startup Definition dialog box appears.
3. In the Service area of dialog box, clear the *Continue running after logoff* check box.
4. Click OK.
5. On the File menu, click Save to save the SCU file.
6. Exit the SCU.
7. Restart iFIX.

iFIX Paths

Windows does not map network drives until a user logs in. Therefore, if you are running iFIX as a service under Windows, all iFIX paths must be set to a local drive.

Required Application Feature

You must assign the Enable Ctrl+Alt+Del application feature to the user that is logged in when iFIX is running as a service. Otherwise if a user logs out of the operating system while iFIX is running as a service, no one will be able to log back in to the operating system.

Running iFIX with Terminal Services

You must configure the Default Service SCU in the Startup Profile Manager if you want to run iFIX as a service on the Terminal Server. For more information, refer to the *Configuring the Default Profile* section in the *Using Terminal Server* electronic book.

Starting the Proficy iFIX WorkSpace

You should not have the WORKSPACE.EXE file listed as a configured task in the Task Configuration dialog box of the SCU. Instead, you should start the Proficy iFIX WorkSpace from the Startup group for the user, or have the user start the Proficy iFIX WorkSpace manually.

NOTE: If you do configure iFIX to run as a service, and the WORKSPACE.EXE is listed as a configured task in the Task Configuration dialog box of the SCU, make sure you configure WORKSPACE.EXE to run as a foreground task. To do this, on the SCU's Configure menu, click Task List. Select the WORKSPACE.EXE task, and in the Startup Mode area click Normal.

Running iFIX with Other Programs

By default, iFIX uses the local System account when running as a service. However, you cannot use the System account with certain applications, such as the Proficy Historian.

► To configure a different user account for iFIX running as a service:

1. From Control Panel, open the Administrative Tools, then Services.
2. In the Services folder, right-click Proficy HMI/SCADA iFIX server and select Properties.
3. In the Log On tab, set the user name and password for This Account to the user account you want to log in when iFIX is running as a service.

Installing the iFIX Software

The steps that follow outline how to install the iFIX software from the product install CD-ROM.

► To install iFIX software:

1. Log in to Windows with Administrator privileges. Ensure that there are no iFIX, FIX, or GE Fanuc processes running, and close any other programs that are running.
2. Insert the iFIX CD into your CD-ROM drive. The iFIX installation screen appears.

NOTE: If this screen does not automatically appear, double-click the *InstallFrontEnd.exe* file on the CD to display it.

3. Click the "Install iFIX" link. A message box appears asking you to confirm the install.
4. Click Yes to proceed. The install program starts and the Welcome screen appears.
5. Click Next to continue. The license agreement screen appears.
6. Click "I accept the terms of the license agreement" if you want to continue, and then click Next.

IMPORTANT: *If a previous version of iFIX is detected, you can choose to upgrade iFIX or install iFIX to a completely new folder, without upgrading. If you want to upgrade, it is suggested that you do so using the install at this point in time.*

The Setup Type screen appears.

7. Select Complete and then click Next. If you selected Custom instead, you will be prompted later to select your install features, such as the Sample System and FIX Desktop. The Choose Destination Location screen appears.
8. Leave the default C:\Program Files\GE Fanuc\Proficy iFIX path or click Browse to select a folder.

NOTES:

- *If you are upgrading from FIX32, make sure that you choose a location other than the folder that contains your FIX32 software, if it is installed on the same computer. **Do not install over a current FIX32 installation.***
- *If you enter a custom install path, be aware that the path can be no greater than 100 characters long.*
- *If you want to use 6.x drivers, the iFIX compressed install path must be no greater than 64 characters long. iFIX uses the Microsoft compression algorithm to try to fit longer paths within this boundary. Some paths are not compressible to the 64 character maximum length. Please be aware of this. In addition, make sure that the registry key, `HKEY_LOCAL_MACHINE\System\CurrentControlSet\Control\FileSystem\NtfsDisable8dot3NameCreation`, is not enabled (is set to 0) when the install folder is created. When set to 1, the compression algorithm is disabled. Refer to Microsoft help for more information on the `GetShortPathName()` compression algorithm.*

9. Click Next to continue.

NOTE: *If you selected a Custom install, instead of Complete, the Select Features screen appears. Select the features you want to install, and click Next.*

The Ready to Install Program screen appears.

10. Click Install. The progress of the installation displays on screen as the files are copied. After a few minutes, when the install finishes copying the files, the Node Information dialog box appears.

11. Enter the Node Name, Node Type, and Connectivity Type, if applicable, and then click OK. After a few moments, a message box appears asking if you would like to review the release notes.
12. Click Yes to view the release notes. Close the release notes after you finish reviewing them to resume the install. The Setup Complete dialog box appears.
13. Click Finish.
14. After the install completes:
 - If you have a new key, power off the computer and insert your USB or parallel port key into the appropriate port.
 - If you have an older key that you are updating, use the update file and follow the instructions from GE Fanuc to update your key.
15. Restart the computer.
16. Restart your computer. As the computer restarts, log in to Windows with the same user name (with Administrator rights).

IMPORTANT: *If upgrading from FIX v7 to iFIX with FIX Desktop, do not start iFIX yet. Refer to the Overview of Steps to Upgrade from FIX 7.x section for information on how to proceed.*

Installing the FIX Desktop Software

FIX Desktop is provided as a custom option in your iFIX product install. To install FIX Desktop option when installing iFIX, select the Custom option and then select the FIX Desktop check box from the list of features. If you install iFIX without FIX Desktop, you can later install it by running the iFIX install program again.

The steps that follow explain how to install the FIX Desktop software from the product install CD-ROM, after you already installed iFIX.

► To install FIX Desktop software after installing iFIX:

1. Ensure that there are no iFIX, FIX, or GE Fanuc processes running, and close any other programs that are running.
2. Log in to Windows with Administrator privileges.
3. Insert the iFIX CD into your CD-ROM drive. The iFIX installation screen appears.

NOTE: *If this screen does not automatically appear, double-click the InstallFrontEnd.exe file on the CD to display it.*

4. Click the "Install iFIX" link. A message box appears asking you to confirm the install.

5. Click Yes to continue. The install program starts and the Welcome screen appears.
6. Click the Modify option, and then click Next to continue. The Select Features screen appears.
7. Select the FIX Desktop check box and click Next. The install begins.

NOTE: *FIX Desktop applications are installed into the iFIX product folder. If you installed iFIX to the default location, this folder is C:\Program Files\GE Fanuc\Proficy iFIX.*

When the install completes a Maintenance Complete message box appears.

8. Click Finish.
9. Restart your computer.

IMPORTANT: *If upgrading from FIX v7, do not start iFIX yet. Refer to the Overview of Steps to Upgrade from FIX 7.x section for information on how to proceed.*

Online Registration

You can register iFIX online after you have installed the product.

► To register iFIX online:

1. From the WorkSpace's Help menu, point to Proficy iFIX WorkSpace Help, and then GE Fanuc Automation On the Web, and click Register Online.
2. Enter the appropriate fields on the registration form, and click Next until all pages are completed.

Using iFIX and FIX on the Same Computer

Although you can run iFIX and FIX Desktop applications at the same time, you cannot run iFIX and FIX 7.0 at the same time on a single computer. You can have iFIX and FIX 7.0 installed on the same computer, however. The following sections address issues that occur when installing iFIX and FIX 7.0 on the same computer.

NOTE: *Because the hardware key for iFIX with FIX Desktop is different from the FIX hardware key, remember to remove the iFIX hardware key and insert a FIX hardware key before installing or running FIX 7.0.*

General Notes on Installing FIX and iFIX on the Same Computer

When installing FIX 7.0 on a computer that already has iFIX installed (or vice versa) do not elect to use the current SCU configuration when prompted during the install. If you select to use the current SCU, both FIX and iFIX will launch with errors when you try to run either program after the install.

Installing iFIX on a FIX 7.0 Node

If you install iFIX on a node that has FIX installed and you have at least one version 7.0 driver installed, the registry paths for FIX 7.0 are changed to iFIX paths. Therefore, when you run a FIX 7.0 application, such as the System Configuration Utility, you will receive errors.

To avoid these errors, install iFIX without I/O drivers. This preserves your FIX 7.0 paths in the registry.

Uninstalling iFIX and FIX 7.0

You can install iFIX and FIX 7.0 on the same computer. If you subsequently uninstall iFIX, you must re-install FIX 7.0.

Starting up FIX 7.0 After Installing iFIX

An application error occurs when you start up FIX 7.0 as a service under Windows after you install iFIX. The error occurs because both FIX 7.0 and iFIX 4.0 use the same key name (FIX) under the Services key in the registry. Therefore, when you install iFIX 4.0, it overwrites the entry for FIX 7.0.

Each product needs to have its own Services key. FIX 7.0 runs correctly if it is not run as a service.

The workaround for this problem is to edit the registry so that the Services key points to the service executable in the correct path. The key is located in HKEY_LOCAL_MACHINE\System\CurrentControlSet\Services\Fix. Set the ImagePath value to the correct path for fixsrv.exe.

Installing iFIX 4.0 after Uninstalling iVisualize

If you have uninstalled iVisualize®, you must modify the FixUserPreferences.ini file before installing iFIX 4.0. This file is located in the C:\Program Files\GE Fanuc\Proficy iFIX\Local folder.

The section [AppConfigPicturePreferences] contains the following lines:

```
TotalConfigPicturePath=1
PicturePath#0=*C:\Program Files\GE Fanuc\Proficy iFIX\PDB\PanelStart.ivs
```

Change TotalConfigPicturePath=1 to TotalConfigPicturePath=0 and delete the line that reads PicturePath#0=*C:\Program Files\GE Fanuc\Proficy iFIX\PDB\PanelStart.ivs.

You will then be able to install iFIX 4.0.

Using iFIX with Microsoft Office

You can use the Microsoft Office family of products and iFIX on the same computer. However, to ensure that VBA works correctly, install Microsoft Office products before installing iFIX.

Use the following table as a guide for installing and removing either product.

If you have...	And you want to...	Then...
Installed iFIX	Install Microsoft Office Products	Remove iFIX, install Microsoft Office products, and re-install iFIX.

If you have...	And you want to...	Then...
Installed Microsoft Office Products	Remove Microsoft Office Products	Remove iFIX, remove Microsoft Office products, and re-install iFIX.
Started the iFIX WorkSpace for the first time, and this message appears: Run time error "48": Error in loading dll.	Use iFIX and Microsoft Office harmoniously	Uninstall iFIX, uninstall Microsoft Office, re-install Microsoft Office, and re-install iFIX.

Backup Files

When you save one of the following files, iFIX creates a backup file:

- ***.PDB** – backed up as *.^DB
- ***.SCU** – backed up as *.^CU
- **Profiles.cfg** – backed up as Profiles.cfg.^AK
- **DISPLAY.DOV** – backed up as DISPLAY.^OV
- **NODENAME.DOV** – backed up as NODENAME.^OV

iFIX also creates these backup files after you start iFIX for the first time after an upgrade. These backup files are helpful in disaster recovery of the individual files.

For new iFIX installs, be aware that you can also use the Factory Default Backup for disaster recovery – performing a clean restore of your entire iFIX system. A clean restore includes the files listed above along with other Factory Default files. For more information, refer to the *Using and Creating Factory Default Files* section in the *Understanding iFIX* electronic book.

For upgrades, be aware that you can perform a Custom Backup to backup the files listed above before the upgrade. After the upgrade, you can restore these files with the Backup and Restore wizard. Refer to the *Overview of the Backup Process* section in the *Understanding iFIX* electronic book for more information.

IMPORTANT: Do not use a Full Backup from a previous release of iFIX to update the files in the currently installed iFIX folder. Issues can occur with upgrade paths, and possibly other files.

Optionally, after you upgrade your system with the Custom Backup, you can create a new Factory Default Backup, that you can use for disaster recovery in replace of the original Factory Default Backup file. This information is described in the *Using and Creating Factory Default Files* and *Sample BackupRestore.ini* sections.

Optional Hardware

iFIX supports the following optional hardware. You may want to purchase one or more of these items to enhance your iFIX system.

- A Microsoft-supported touch screen or other pointing device.
- A DigiBoard™ to provide your computer with up to 9 serial ports. If you are using multiple I/O drivers or multiple ports for one I/O driver, you may require the use of a DigiBoard. GE Fanuc has tested and supports the Digichannel PC/8E.

Upgrading from an Earlier Version of iFIX

This chapter contains information about issues concerning upgrading to iFIX 4.0. Issues specific to upgrading from iFIX 2.5 and earlier are clearly marked.

Before You Upgrade

Before you upgrade your version of iFIX make sure you:

- Shut down all Proficy applications. It is important that no Proficy products are running when you run the iFIX installation program.
- Save copies of your existing .INI files with your application preferences and any custom files you create. Customized files, such as *Res.dll files, and some *.INI files may be overwritten during an upgrade. As such, you may need to integrate your custom changes into the newer versions of these files after you upgrade.
- Back up your existing iFIX projects. This includes the files in your LOCAL, Config Files Backup, PIC, and PDB folders.
- It is also recommended that you create a backup copy of your Alarm ODBC configuration file(s).
- Export a report of your system configuration (SCU), for reference. (In the SCU, on the File menu, click Report. Refer to the *Generating a System Configuration Report* section for detailed steps.)
- Export a report of your security configuration, for reference. (In the Security Configuration application, on the File menu, click Export. Refer to the *Exporting a Report of the Security Configuration* section for detailed steps.)
- If you have an application created by an Integration Toolkit, Database Dynamo Toolkit, or System Extension Toolkit from iFIX 2.5 or earlier, and you want to use this application with iFIX 4.0, do not uninstall iFIX. You must install iFIX 4.0 over your existing iFIX configuration. Your toolkit application will not run if you uninstall your previous version of iFIX.
- Be sure to obtain any toolkit updates that you need, prior to installing iFIX. For instance, if you have previously installed the iFIX Productivity Pack for Allen Bradley, you must get the updated version prior to upgrading to iFIX 4.0.

► To upgrade from earlier versions of iFIX

1. Update your license and/or hardware key. For steps refer to the *Upgrading the iFIX 4.0 License* section.
2. Log in to Windows with Administrator privileges.
3. Ensure that there are no iFIX, FIX, or GE Fanuc processes running, and close any other programs that are running.
4. Insert the iFIX CD into your CD-ROM drive. The iFIX installation screen appears.

NOTE: *If this screen does not automatically appear, double-click the `InstallFrontEnd.exe` file on the CD to display it.*

5. Click the "Install iFIX" link. A message box appears asking you to confirm the install.
6. Click Yes to continue. The install program starts and the Welcome screen appears.
7. Click Next to continue. The license agreement screen appears.
8. Click "I accept the terms of the license agreement" if you want to continue, and then click Next.

A message box appears indicating that a previous version of iFIX has been detected.

9. Click Yes to upgrade.

CAUTION: *If you select No to this message, you can no longer run the older version of iFIX. By default, iFIX installs to the `C:\Program Files\GE Fanuc\Proficy iFIX` folder instead. **THIS IS NO LONGER AN UPGRADE.** Use caution in copying files from your previous iFIX release, into your new iFIX install folder.*

The Setup Type screen appears.

10. Select Complete and then click Next. If you selected Custom instead, you will be prompted later to select your install features, such as iFIX with FIX Desktop. The Ready to Install Program screen appears.
11. Click Install. The progress of the installation displays on screen as the files are copied. After a few moments, a message box appears asking if you would like to review the release notes.
12. Click Yes to view the release notes. Close the release notes after you finish reviewing them to resume the install. The Setup Complete dialog box appears.
13. Click Yes to restart your computer now, or No to do it later.
14. Click Finish.

NOTE: *Be sure to restart your computer before starting iFIX. As the computer restarts, log in to Windows with the same user name (with Administrator rights).*

Upgrading the iFIX 4.0 License

The instructions for upgrading your iFIX license depend on the key you have and the enabled options you want. You may need to run an update program, or you may need to exchange your key for a newer one. iFIX 4.0 only supports HASP M1 or M4 keys.

The version and type of key you have should appear imprinted on the outside of the key. If you do not know what type of key you have, check the label on the physical key. If you are still unsure whether you need to exchange your key for a new one, contact your iFIX sales representative.

Upgrading from iFIX 2.6 or Later

When you upgrade to iFIX 4.0 from iFIX 2.6 or later, you are required to update the license on each iFIX machine. If you have an M1 or M4 key, GE Fanuc provides utilities to help you perform this task.

For an M1 key, use the iKeyDiag application to update your license. For an M4 key (the newest key), use the Proficy License Viewer to update your license. To perform a key update:

- For iKeyUpdate, you will need to obtain an iLicense update file with specific information about your key.
- For the Proficy License Viewer, you will need to obtain a .plc update file with specific information about your key.

For information about obtaining the iLicense or .plc file, contact your sales representative. You will receive the new licensing file by disk or by e-mail.

If you have other new Proficy products installed you may be required to update to an M4 key. This requires you to physically remove the M1 key and insert the new hardware key. You cannot use both an M1 and M4 key on the same computer. For steps on how to install a hardware key, refer to the *Installing the Hardware Key* section.

If you have a Rainbow SuperPro (Sentinel) key, which was offered for iFIX 2.6 (before 2002), this key must be exchanged for a newer key, if you want to upgrade to iFIX 4.0.

► To update the license with the iLicense file:

1. Double-click on the iLicense filename. The iKeyUpdate dialog box opens.

The full path to your iLicense file should appear in the Update File text box. If it doesn't appear, browse to it.

2. Click Update Now to update your hardware key.
3. Click OK to confirm that you want to update your key. A message appears telling you that the key was successfully updated.
4. If you want, you can run iKeyDiag to review the update to your hardware key.

NOTE: Do not install iFIX 4.0 if you do not have the iLicense file. iFIX 4.0 will function in demo mode only on a system that does not have an updated key.

► To update the license with the .plc file:

1. Save the .plc file to a directory of your choice.
2. Double-click the file. The Key Update utility appears. The full path to your .plc file should appear in the Update File text box. If it does not appear, browse to it.
3. Click Update Now to update your hardware key.

The utility validates your current license. If the validation is successful, the utility updates the license; if the validation is not successful, the upgrade is halted.

Upgrading from iFIX 2.5 and Earlier

When you upgrade to iFIX 4.0 from iFIX 2.5 and earlier, you are required to replace your existing hardware key and license with a new hardware key and license. You should return your old key to GE Fanuc. For information about obtaining a new hardware key and license, or returning your old key, contact your iFIX sales representative.

For more information about the new hardware key, see *The Hardware Key* section of this manual.

Preserving Settings when Upgrading to iFIX 4.0

When iFIX is installed, all previously existing configuration files in the iFIX Local folder, with the exception of the *Res.dll files, are backed up to the C:\Dynamics\Config Files Backup folder. To preserve these settings, after the install, copy your customized changes from these backup files into each current file located in the Local folder. Do not copy and paste the entire file into the Local folder because it would overwrite any new settings installed with iFIX 4.0.

Notes on Database Dynamos and Custom Programs that Run with iFIX Startup

When you install the newest release of iFIX, the product install program places a new version of the startup control file, FIX.INI, into your iFIX Local directory. The previous version of this file is copied to the iFIX Config Files Backup folder, along with the other configuration files.

If you configured Database Dynamos, also known as loadable blocks, or other custom programs to run as part of iFIX startup, you should compare the new FIX.INI file in the Local folder against the FIX.INI file stored in the Config Files Backup folder. If you find any changes between the two files, add the necessary lines to the new FIX.INI stored in the Local path. Do not copy the old FIX.INI over the new FIX.INI file.

NOTE: Paths with embedded path spaces in the FIX.ini require quotes. For example:

```
RUN="%E:\PROGRAM FILES\GE FANUC\PROFICY IFIX\SysAlertQMgr.exe" /F /NSysAlertViewer
```

SCU Files and the Upgrade

If a previous version of iFIX already resides on your computer when you try to install iFIX 4.0, a message box appears during the installation suggesting that you upgrade your existing iFIX install. It is recommended that you elect to upgrade iFIX when this message appears. By following the upgrade process, iFIX 4.0 installs to same folder where your previous version existed. For instance, if you have

iFIX 3.5 installed to the C:\Dynamics folder, when you upgrade, iFIX 4.0 installs to the C:\Dynamics folder. After the iFIX 4.0 install completes and you restart iFIX, your SCU file is upgraded automatically, and the original file is backed up with a .^CU extension.

If you choose not to upgrade and install iFIX to another path, such as the default: C:\Program Files\GE Fanuc\Proficy iFIX, there are a few extra steps you need to perform before you can start the older version SCU file in iFIX 4.0. First, you must rename the older version SCU file, so that the name is different than the default iFIX 4.0 SCU file. For instance, if you try to start an iFIX 3.5 SCU file in iFIX 4.0 when the names of both SCU files are the same, an error message appears instead. So, be sure to rename your iFIX 3.5 SCU file to something other than the startup default file name before opening it in the iFIX 4.0 System Configuration Utility. After launching the SCU application, open the older SCU file. Now you can manually update the information in it, as described in the following steps.

Be aware that if you have a Custom Backup available of your 3.5 node, you also can use that file to upgrade your SCU. During the restore, make sure you select the Use SCU File from Archive check box. If the SCU file name you are upgrading is the same as the iFIX 4.0 default SCU file name, you need to change the path configuration at this point. Click on the View Project Path Configuration button to check the current paths. In the Project Path edit box, enter the iFIX40 install path. This upgrades your SCU file automatically, however you still have to manually update other SCU information in the System Configuration Utility, as described in the following steps. For more information on the restore process, refer to the *Overview of the Restore Process* section in the *Understanding iFIX* electronic book.

IMPORTANT:

- *You do not need to use a Full Backup from a previous release of iFIX if you are just upgrading the SCU file. Instead, use a Custom Backup. Make sure that you back up the SCU only in the .fbk file and restore it only in iFIX 4.0. If you do a Custom Backup, click “NO TO ALL” other files when restoring just the SCU file. Do not use a Full Backup between iFIX versions. Issues can occur with upgrade paths, and possibly other files.*
- *During a restore, use caution in restoring other configuration files. For instance, if you overwrite the .INI files in your iFIX Local folder, you lose all of iFIX 4.0 .INI settings. After that is done, there may be issues that cause iFIX or certain features not to work properly. For instance, if you overwrite the 4.0 FIX.ini file with the 3.5 one, you need to remove or comment out the RUN=REGISTERHELPPFILES line in order to start iFIX 4.0 with this file.*

► To update the SCU information manually:

NOTE: *The following steps describe how to modify an SCU file with a path outside the install path, so that you run it in iFIX.*

1. Shut down iFIX.
2. On the Start menu, point to Programs, Proficy HMI SCADA - iFIX, and then System Configuration to open the SCU.
3. From the SCU Configure menu, click Paths.
4. In the Path Configuration dialog box, change the base path and NLS path to point to the local install path. Change the project path to point to the project destination folder, if it does not already do so.
5. From the SCU Configure menu, click Tasks.

6. In the Task Configuration dialog box, change the path of the configured tasks to the local install path, make sure that you include the same command line options.
7. From the SCU Configure menu, click Network.
8. In the Network Configuration dialog box, confirm the information is correct and make changes if necessary.
9. From the SCU Configure menu, click SQL, and then click Configure SQL Tasks.
10. In the SQL Task Configuration dialog box, make sure that the Primary and Backup paths are correct, if used.
11. From the SCU Configure menu, click Local Startup Paths.
12. In the Local Startup Definition dialog box, change the path to the folder you copied the project to with the get command.
13. From the SCU File menu, click Save. Save it as the default startup SCU file name or indicate that this is the SCU you want to use on startup.
14. Restart iFIX.

Title Bar in iFIX WorkSpace

iFIX 3.0 and later provides a new title bar in the WorkSpace, which reads "Proficy iFIX WorkSpace." If you have any custom applications that use the FindWindow Microsoft API call, you will need to update these applications to reflect the new title bar.

Programs that Run as a Service with iFIX

When you start iFIX as a service, programs in the startup task list also start as services. If you upgrade from a previous version of iFIX, be aware that programs listed in the SCU's Task Configuration dialog box will continue to run as services if iFIX remains running as a service.

However, if you previously started the iFIX OPC A&E Server with this command:

```
iFixOPCAESrv.exe -service
```

The -service option is no longer needed to run the iFIX OPC A&E Server as a service. You should go into the Task Configuration dialog box and remove the -service command from the startup task list.

Be aware that you can only run programs such as the iFIX OPC A&E Server as a service if iFIX is configured to run as a service.

Imported Toolbars

If your Proficy iFIX WorkSpace contains toolbars imported in other iFIX versions, such as the Proficy Historian toolbar, you will need to reimport these toolbars after upgrading to iFIX 4.0.

Standard vs. Classic Window Styles

Because the standard window styles now include larger title bars and menu bars, such as those in Windows XP, scroll bars may appear in iFIX pictures (that you created in earlier versions of Windows) when you open them.

To resolve this issue, GE Fanuc recommends that you change the Appearance Scheme in the Windows Display Properties dialog box to Windows Classic.

Changing Permissions for PlugAndSolve and User Globals

If you upgrade from iFIX 2.6, you may need to change the security properties of the user.fxg and plugandsolve.fxg files. In the Security tab of the Properties dialog for each of these two files, enable the following check box: Allow inheritable permissions from parent to propagate to this object.

Database Dynamos

Database Dynamos, also known as loadable blocks, will require updates to work with iFIX 4.0. If you have old Database Dynamos on your system, the iFIX install program will detect them, and generate a warning message. This includes any Database Dynamos that you downloaded from the GE Fanuc web site, or installed from the Allen-Bradley Productivity Pack CD before you installed iFIX 3.x.

The GE Fanuc web site contains updated versions of the database dynamos supplied by GE Fanuc. To obtain updated version of other dynamos, contact the vendor of that dynamo. To obtain the current version of the Database Dynamo Toolkit, contact your local iFIX sales representative.

Advanced Historian Not Supported with iFIX 4.0

Advanced Historian is not supported with iFIX 2.6 and later. If you have Advanced Historian installed, contact your local iFIX sales representative about upgrading to Proficy Historian, GE Fanuc's historian product.

Compatibility of iFIX 4.0 Pictures

iFIX 4.0 supports pictures created, saved, or built in previous versions of iFIX. However, pictures created, saved, or built in iFIX 4.0 are not compatible and cannot be opened in older versions of iFIX.

Resolving iFIX Displays

When you upgrade your iFIX system, or add or delete tags from your database, it is important that you run resolve on all pictures and schedules. This will ensure that you are getting maximum performance from your iFIX system.

Converting Pictures from FIX 7.x to iFIX

When converting pictures from FIX v7 to iFIX, we recommend that you load the corresponding database in Database Manager before converting a picture. If you do not load the current database, you will need to manually reset each animation. For more information, see the *Using the Picture Converter Utility* section of the *Creating Pictures* electronic book.

Running Pictures Created in an Older Version of iFIX

If you performed your original picture development on an earlier version of iFIX and have not upgraded to iFIX 2.2 or later, you may experience color mapping errors when upgrading to iFIX 4.0. To avoid color mapping problems, perform the following steps before saving and resolving any pictures in iFIX 4.0.

► To avoid color mapping problems:

1. Copy and save the tables.lst file from the older version of iFIX.
2. Install the iFIX 4.0 upgrade or switch to the upgraded machine.
3. Shut down the WorkSpace.
4. Delete the tableconversion.lst file from the iFIX directory (C:\Program Files\GE Fanuc\Proficy iFIX).
5. Copy the original tables.lst file to the iFIX directory.
6. Restart the WorkSpace.

Using Code Written for Pictures in iFIX 2.1

Code written to position or size a picture using the ActiveWindow object in iFIX 2.1 may produce different results in an iFIX 4.0 system using multiple monitors with autoscale disabled. The incorrect positioning and sizing occurs because the ActiveWindow object in 2.1 does not account for the disabled autoscale in 4.0.

You can access the ActiveWindow object directly from the documents collection or by calling the OpenPicture subroutine.

To correct the sizing and positioning, multiply the parameters in the 2.1 script by the number of monitors.

For example:

In iFIX 2.1, you opened a picture on the second monitor of a dual monitor system by issuing the following command:

```
openpicture "picture.grf",,0,50
```

In iFIX 2.6 and later, open a picture on the second monitor of a dual monitor system by issuing the following command:

```
openpicture "picture.grf",,0,100
```

iFIX Dynamo Sets

When you install iFIX 4.0 or a Software Improvement Module (SIM) that updates any iFIX Dynamo sets, the Dynamo sets from previous versions are overwritten.

To avoid losing any modifications made to these files, you can rename them or move them to a folder located outside the iFIX picture path. Dynamo set files have an .FDS extension and are located in the C:\Program Files\GE Fanuc\Proficy iFIX\PIC folder, by default.

Deleting Temp Directory Contents if iFIX 4.0 Installation Fails

When upgrading to iFIX 4.0, in some cases the installation will run too quickly, taking only a few seconds, or hang and not complete the process. In both cases, the product will not successfully install.

If this happens, delete the contents of the Temp directory and run the installation again.

Upgrading from FIX 7.x

If you want to upgrade from FIX 7.x to iFIX 4.0, but continue to use your FIX 7.x pictures, you must install iFIX with the FIX Desktop option. FIX Desktop is provided as a custom option in your iFIX product install. To install FIX Desktop option when installing iFIX, select the Custom install option, and then select the FIX Desktop check box from the list of features.

After you upgrade to iFIX with FIX Desktop, you can run FIX Desktop Draw, View, and HTD applications alongside the Proficy iFIX WorkSpace. All applications use the iFIX security, database, and system configuration information.

This chapter describes how to upgrade the FIX 7.x product to iFIX 4.0 with FIX Desktop. After you upgrade, you can continue to use your FIX32 pictures in FIX Desktop Draw and View applications, or you can migrate and create new pictures in the Proficy iFIX WorkSpace.

Before you upgrade, you need to follow the steps outlined in the *Preparing for the Upgrade to iFIX with FIX Desktop* section. The actual upgrade steps are outlined in the *Overview of Steps to Upgrade from FIX 7.x* section.

Preparing for the Upgrade to iFIX with FIX Desktop

The following sections describe the steps you need to take to prepare your computer for upgrading to iFIX with FIX Desktop. These sections are presented in the order that you should proceed with each task.

► To prepare for the upgrade:

1. Convert recipes to the required format by Preparing the Recipe Files for the Upgrade.
2. Export I/O driver information by Preparing the I/O Drivers for the Upgrade.
3. Record the enabled environmental protection options by Checking the Environmental Protection Settings.
4. Be sure to save all required files by Backing Up FIX Files.
5. Compile a list of user accounts by Exporting a Report of the Security Configuration.

6. Edit the user accounts in the report file by Adding Passwords to the .RPT File.
7. Finish by Generating a System Configuration Report.

Preparing the Recipe Files for the Upgrade

If any of your current FIX32 projects uses recipes, you will need to convert these recipes to .rcx (Master text) and .rcy (Control text) files before you upgrade to iFIX with FIX Desktop. These recipes are located in the FIX32 RCM and RCC folders. This step is necessary so that you can import your recipes after installing iFIX with FIX Desktop.

► To convert your recipes to .rcx and .rcy files:

1. Start FIX32.
2. If security is enabled, log in using a user account with Administrator rights.
3. Start the FIX32 Recipe Manager, RCP.EXE.
4. Save each master recipe as a .rcx file:
 - a. Open the master recipe (.RCM file).
 - b. On the File menu, click Save As. The Recipe Mod Log dialog box appears.
 - c. Click Save As. The recipe Save As dialog box appears.
 - d. From the Save File As Type drop-down list, select Master text (*.rcx).
 - e. Confirm that the location is the RCM folder and the file name is the same as the original file.
 - f. Click OK.
5. Save each control recipe as a .rcy file:
 - a. Open the control recipe (.rcc file).
 - b. On the File menu, click Save As. The Recipe Mod Log dialog box appears.
 - c. Click Save As. The recipe Save As dialog box appears.
 - d. From the Save File As Type drop-down list, select Control text (*.rcy).
 - e. Confirm that the location is the RCC folder and file name is the same as the original file.
 - f. Click OK.
6. Verify that you saved all recipes by inspecting the FIX32\RCC and FIX32\RCM folders.

Preparing the I/O Drivers for the Upgrade

Before you upgrade to iFIX with FIX Desktop, GE Fanuc recommends that you use the driver configuration program to export the driver information into .CSV files. By default, these files are saved

to the FIX32/PDB folder. You use these .CSV files later to import the driver information into the upgraded system.

Later in the install process, after importing the driver files, you can verify the driver migration and convert the process database for use with iFIX and FIX Desktop.

► **To export the driver configuration:**

1. Start the current installation of FIX (if it is not already running).
2. If security is enabled, log in using a user account with Administrator rights.
3. Start the System Configuration Utility (SCU).
4. On the Configure menu, click SCADA. The SCADA Configuration dialog box appears.
5. Select an installed driver (other than SIM or DDE), and click the Configure button. The Driver Configurator program starts.
6. Select the first channel, CHANNEL1, in the browser on the left side of the window.
7. On the File menu, click Save As. The Save As dialog box appears.
8. Leave the default location of FIX32\PDB, and enter a name for the file in the File Name field.
9. From the Save as Type drop-down list, select Text Files (*.CSV).
10. Click Save.
11. Repeat steps 6-10 for each channel of the driver that is currently installed. Note the file names and their location for later use.
12. Repeat steps 5-11 for each I/O driver installed on your system.
13. Exit the SCU.

Checking the Environmental Protection Settings

Before the upgrade to iFIX with FIX Desktop, you should open the Environment Protection dialog in the Draw application and record these settings. After the upgrade, you cannot access this dialog box from Draw. Instead, you configure all environmental protection options in the Proficy iFIX Workspace.

► **To record your current environment protection settings:**

1. Start FIX.
2. Open the Draw application.
3. On the Edit menu, click Environment. The Environment Protection dialog box appears.

4. Inspect and record the enabled options.

Backing Up FIX Files

After you create the support files for your recipe and I/O driver upgrades, you can proceed to back up your FIX 7.x files. Create a new folder on your computer, separate from the FIX 7.x (FIX32) folder, for the files you want to save.

After you back up the FIX files, you may also want to copy this new folder to another location, such as a network drive or a removable media, as a safeguard until the migration is complete.

The following table lists the files and folders that you must back up.

Files or Folder to Copy	Location	Description of FIX32 Component
*.PDB, *.CSV, *.GDB, all driver configuration files	FIX32\PDB	Process database and driver configuration files.
*.ODF	FIX32\PIC	Picture files.
*.ODT	FIX32\PIC	Template files for pictures.
*.TGE	FIX32\PIC	Tag Group Editor files.
*.KMX	FIX32\PIC	Key Macro Editor files.
*.LYT	FIX32\PIC	Layout files.
*.SBL	FIX32\PIC	Custom Dynamos.
*.RCX	FIX32\RCM	Master recipe files, in text format. <i>NOTE: These files do not appear unless you followed the steps in the Preparing the Recipe Files for the Upgrade section.</i>
*.RCY	FIX32\RCC	Control recipe files, in text format. <i>NOTE: These files do not appear unless you followed the steps in the Preparing the Recipe Files for the Upgrade section.</i>
Draw.ini, View.ini, *.RPT	FIX32\LOCAL	Initialization settings for the Draw and View applications, and report files.

Files or Folder to Copy	Location	Description of FIX32 Component
Entire HTRDATA folder	FIX32\HTRDATA	Collected historical data.
Entire HTR folder	FIX32\HTR	Historical collection preferences.
Entire ALM folder	FIX32\ALM	Alarm file and event log.
Entire APP folder	FIX32\APP	Custom data and configuration files for your iFIX applications.

► **To back up the required files:**

1. Create a new folder on your computer, separate from the FIX32 folder, for the files you want to save.
2. Copy the entire PDB folder into this new folder. The PDB folder includes the process database and driver configuration files (*.PDB, *.CSV, *.GDB, all driver configuration files).
3. Copy the entire PIC folder, which includes all displays, display templates, tag groups, key macros, layouts, and custom Dynamos (*.ODF, *.ODT, *.ODT, *.TGE, *.KMX, *.LYT, and *.SBL files).
4. Copy the converted master recipe files (*.RCX) in the RCM folder.
5. Copy the converted control recipe files (*.RCY) in the RCC folder.
6. Copy the initialization settings for the Draw and View applications and report files (Draw.ini, View.ini, *.RPT) from the LOCAL folder.
7. Copy the entire HTRDATA folder, which includes all collected historical data.
8. Copy the entire HTR folder, which includes your historical collection preferences.
9. Copy the entire ALM folder, which includes all alarm files and event logs.
10. Copy the entire APP folder, which includes any custom data and configuration files for your iFIX applications.
11. After you copy all of these files, you may want to back up these files to another location, such as a network drive or a removable media, as a safeguard until the migration is complete.

Exporting a Report of the Security Configuration

Before you upgrade to iFIX with FIX Desktop, you need to export a report from the FIX Security Configuration application. This report includes a list of iFIX users along with the application features configured for each user in your FIX applications. Save this file along with the other FIX files and folders that you backed up.

IMPORTANT: *Passwords are not exported with the security configuration report; you must re-enter the passwords manually. See the Adding Passwords to the .RPT File section for details. This policy is for security purposes.*

After you install iFIX and FIX Desktop (in the same language as the original install), you can import this report file into your new security configuration to recreate the user accounts on the upgraded system. You can also use this printed report as a cross reference when you reassign the new application features to each user.

► To export a list of user accounts:

1. Start the current installation of FIX (if it is not already running).
2. If security is enabled, log in using a user account with Administrator rights.
3. Start the System Configuration Utility (SCU).
4. On the Configure menu, click Security to enter the Security Configuration.
5. On the File menu, click Export. The Select File dialog box appears.
6. Browse to the folder that you want to save the file to. By default, this folder is the FIX32\Local folder. Most likely you will want to save this file to the location where you backed up the other FIX files.
7. Use the default name for the .RPT file, which is *Security.RPT*.
8. Click Save.
9. Open this report in a text editor such as Notepad or Wordpad and print a copy.

Adding Passwords to the .RPT File

The report file that you export from the Security Configuration application does not include user passwords. This is done to protect your system.

If you later try to import this file into the Security Configuration application without the passwords, none of the iFIX user accounts will require passwords. In this case, you would need to re-enter each password manually. You can avoid this step entirely by editing each account in the report file from a text editor before the migration.

► **To add passwords to your exported file with the security configuration:**

1. Open the *Security.RPT* file in a text editor such as Notepad or WordPad. By default this file is located in the Local folder, on the FIX32 node.
2. Search the file for the first instance of the word *User:* in the report. For example:

```
User: GUEST  
Login-name: GUEST  
Timeout: 00:00:00  
Feature: View
```

3. Insert the text *Password:* after the user's login name.
4. Type the user's password after the colon. An example of what this might look like is as follows:

```
User: GUEST  
Login-name: GUEST  
Password: GUEST  
Timeout: 00:00:00  
Feature: View
```

5. Scroll down through the report and repeat steps 3 and 4 for each user in the report.

Generating a System Configuration Report

Before you migrate to iFIX with FIX Desktop, it's a good idea to create a system configuration report. This report includes information that you may need later when you are configuring your SCU. It is also helpful if you want to verify your system after the migration. This report includes:

- General node configuration information, such as the node and setup file name, as well as SCADA, network, NLS, and security options.
- System path locations for base, local, language, database, pictures, and so on.
- SCADA configuration such as the name and number of I/O drivers.
- Alarm configuration information such as default message format, application message routing, remote alarm areas, alarm network service, alarm summary, and alarm history service settings.
- List of startup tasks.
- SQL configuration.
- Auto Alarm Manager configuration to send and receive alarms.

This report contains valuable reference information on your current FIX system before the upgrade.

► To generate a system configuration report:

1. Start the current installation of FIX32 (if it is not already running).
2. If security is enabled, log in using a user account with Administrator rights.
3. Start the System Configuration Utility (SCU).
4. On the File menu, click Report. The Select Report Name dialog box appears.
5. In the File Name field, leave the default name. The default name is the node name.
6. Click Save. A report named *NodeName.RPT* is saved to the Local folder. A message appears when the save is complete.

NOTE: *NodeName* is the name from step 5.

7. Click OK to continue.

Overview of Steps to Upgrade from FIX 7.x

After you complete the steps described in the *Preparing for the Upgrade to iFIX with FIX Desktop* section, you can proceed to the actual product upgrade.

► To upgrade from FIX 7.x:

1. Complete the steps for Installing the iFIX Software.
2. Follow the steps for Installing the FIX Desktop Software.
3. Update the Database Dynamos.
4. Install the Newest Drivers and iFIX Product SIMs.
5. Copy the Backed Up Files into the New Product Folder.
6. Import the FIX I/O Driver Configuration Information.
7. Verify the I/O Driver and Database Migration.
8. Import the Recipes Files.
9. Import the Security Configuration.
10. Reconfigure the Application Features and Passwords for Each User.
11. Redefine SCADA Failover Settings.
12. Enable Environmental Protection.

13. Setup the Report Generator.

Update Database Dynamos

To use FIX 7.x Database Dynamos in iFIX with FIX Desktop, you must recompile them with the iFIX Database Dynamo Toolkit. Follow the steps outlined in the iFIX Database Dynamo Toolkit and the Database Converter will update your Database Dynamos. The Database Converter runs whenever iFIX is started. For information on the Database Dynamo toolkit, contact GE Fanuc.

Install the Newest Drivers and iFIX Product SIMs

You must install the most current drivers before you migrate the Process Database (PDB) from FIX32 to iFIX with FIX Desktop. This is necessary so that your FIX32 applications can migrate properly to iFIX with FIX Desktop. You can install the newest drivers from the most current Driver CD, or by obtaining the driver file from the Proficy GlobalCare Support web site, <http://globalcare.gefanuc.com/downloads/drivers>.

To install the driver, follow the instructions that came with your driver CD, or with your download. If you install a driver from the web, the process generally entails extracting files from a .EXE and running a simple install program or manually copying files. Refer to the driver documentation for information on the install process.

After obtaining and installing the latest drivers, GE Fanuc recommends checking for the latest patches for the iFIX product. Obtain all applicable iFIX SIMs and add-ons from the Proficy GlobalCare Support web site, <http://globalcare.gefanuc.com/downloads/sims>. Install these SIMs on top of the current iFIX installation.

► To install the newest drivers and iFIX product SIMs:

IMPORTANT: *You must install the most current drivers before you migrate the Process Database (PDB) files from FIX32 to iFIX. This step is necessary so that your FIX32 applications can migrate properly to iFIX.*

1. Obtain the latest the most current Driver CD or the driver update from the GlobalCare Support web site, <http://globalcare.gefanuc.com/downloads/drivers>.
2. Follow the instructions that came with your driver CD, or the information included with the driver download.
3. Check for the latest patches for the iFIX product. Obtain all applicable iFIX SIMs and add-ons from the GlobalCare Support web site, <http://globalcare.gefanuc.com/downloads/sims>.
4. Install these SIMs on top of the installed iFIX product.
5. Do not start iFIX.

Copy the Backed Up Files into the New Product Folder

After iFIX with FIX Desktop is installed, along with the drivers, appropriate SIMs, and hardware key, you can copy your previous FIX32 files into the new iFIX with FIX Desktop install location. As you remember, you backed up these files before beginning the iFIX with FIX Desktop installation. The default iFIX install folder is: C:\Program Files\GE Fanuc\Proficy iFIX.

The following table lists the files to copy from your backup folder, and the location to copy them to (assuming you used the default iFIX directory).

Files to Copy	Location to Copy in iFIX Folder
*.PDB, *.CSV, *.GDB all driver configuration files	PDB
*.ODF	PIC
*.ODT	PIC
*.TGE	PIC
*.KMX	PIC
*.LYT	PIC
*.SBL	PIC
*.RCX	RCM
*.RCY	RCY
Draw.ini, View.ini, *.RPT	LOCAL
HTRDATA/*.*	HTRDATA
HTR/*.*	HTR
ALM/*.*	ALM
APP/*.*	APP

► **To copy the backed up files into the appropriate Proficy iFIX product folders:**

1. Copy the *.PDB, *.CSV, and *.GDB files from the FIX32 PDB folder into the iFIX PDB folder.

NOTE: If you installed iFIX to the default location, the iFIX folders are located in this path:
C:\Program Files\GE Fanuc\Proficy iFIX.

2. Copy the contents of the FIX32 PIC folder into the iFIX PIC folder.
3. Copy the *.RCX files into the iFIX RCM folder.
4. Copy the *.RCY files into the iFIX RCC folder.
5. Copy the Draw.ini, View.ini, *.RPT files for FI32X into the iFIX Local folder.
6. Copy the contents of the FIX32 HTRDATA folder into the iFIX HTRDATA folder.
7. Copy the contents of the FIX32 HTR folder into the iFIX HTR folder.
8. Copy the contents of the FIX32 ALM folder into the iFIX ALM folder.
9. Copy the contents of the FIX32 APP folder into the iFIX APP folder.

Import the FIX I/O Driver Configuration Information

After you copy the backed up FIX files into your new iFIX with FIX Desktop folder, you are ready to import the I/O driver configuration information.

► **To import the I/O driver configuration information:**

1. Start the iFIX SCU, by clicking the Start button, pointing to Programs, Proficy HMI SCADA - iFIX, and then Security Configuration.
2. Verify that the Node name that appears on the main screen is correct. Refer to the NodeName.RPT report described in the *Generating a System Configuration Report* section if you are unsure of the name.
3. Double-click the Database Name to enter the database name you want to use. The Database Definition dialog box appears. Ensure it is the same name as the previous project.
4. Click OK. A prompt appears stating that the database does not exist.
5. Select Yes, and use the database anyway.
6. On the Configure menu, click SCADA. The SCADA Configuration dialog box appears.
7. Verify that the required drivers appear in the Configured I/O Drivers list. If required, add the SIM, DDE, and any other required driver to the Configured I/O Drivers list.

8. Click OK, and then Yes when prompted.
9. On the File menu, click Save.
10. Close the SCU.
11. Click Start and point to Programs, Proficy HMI SCADA - iFIX 4.0, and then iFIX 4.0 to launch the iFIX Startup dialog box.
12. Make sure the local node name is correct, and click the button in this dialog box to start iFIX.
13. When iFIX is running, start the SCU again.
14. On the Configure menu, click SCADA. The SCADA Configuration dialog box appears.
15. Verify each driver configuration is correct by selecting the driver and then clicking the Configure button. The Driver Configurator opens.

If the driver configuration is correct, you can close the Driver Configurator and proceed to step 24.

If you need to make changes, you can make the necessary changes, save the file, and proceed to step 24. Otherwise, import the driver configuration by following steps 16-22.

16. Select the first channel, CHANNEL1, in the browser on the left side of the window.
17. On the File menu, click Open. The Open dialog box appears.
18. From the Save as Type drop-down list, select Text Files (*.CSV).
19. Select the .CSV file for the channel.
20. Click Open.
21. Repeat steps 16-20 for each channel of the driver that is currently displayed.
22. Repeat steps 15-21 for each I/O driver installed on your system.
23. When you finish these tasks for all drivers, on the File menu, click Save and exit the Driver Configurator.
24. Save and Exit the SCU.

Verify the I/O Driver and Database Migration

After configuring the SCU, complete the following procedure to verify the migration of the I/O drivers and to convert the Process Database.

► **To verify the migration:**

1. Start iFIX.
 2. Start Mission Control from the Proficy iFIX WorkSpace. You can find the button to launch Mission Control in the WorkSpace tree.
 3. Examine the information on the I/O Control tab. Ensure that data is being polled. If data is present, advance to Step 6.
 4. If there is no data present, ensure that the driver is loaded and is running. Exit Mission Control and select System Configuration to start the SCU.
 5. On the Configure menu, click SCADA. The SCADA Configuration dialog box appears.
 6. Select the I/O driver and verify that the Poll Records are present. If they are not present, repeat the steps in the *Import the FIX I/O Driver Configuration Information* section.
 7. Maximize the Proficy iFIX WorkSpace and then:
 - a. Start Database Manager from the WorkSpace System Tree.
 - b. Verify that the I/O addresses for your data blocks are correct.
 8. Save and exit Database Manager.
- Errors that occur during the database conversion are written to the error log file (dbcvr.err). You can open this file in any text editor. Use this log file to identify the individual tags causing the problems. Consult the online help or contact GE Fanuc for more details on how to troubleshoot database conversion errors.

Import the Recipes Files

After converting and successfully running the I/O Drivers and Process Database, you can import the recipes that you previously saved as .rcx and .rcy files.

► **To import recipe files:**

1. From the Proficy iFIX WorkSpace, select the FIX Recipes folder in the system tree.
2. Double-click the New Recipe icon. The Recipe Development utility appears.
3. Open each .rcx file in the iFIX RCM folder and save each file as a .rcm file.

4. Open each .rcy file in the iFIX RCC folder and save each file as a .rcc file.
5. When you are finished, exit the Recipe Development utility.

Import the Security Configuration

When you import the security configuration file that you created before the install, all your FIX 32 users are re-added to the iFIX with FIX Desktop software. Later you will need to re-enter passwords for these users and redefine the application features assigned to each user, since the iFIX with FIX Desktop software includes new and reassigned application features. However, before you can do that, you need to import the list of users from the security configuration.

► To import the list of users from the security configuration:

1. Start the current installation of FIX (if it is not already running).
2. From the Proficy HMI SCADA - iFIX program group, start the System Configuration application. The SCU opens.
3. On the Configure menu, click Security. The Security Configuration application appears.
4. On the File menu, click Import. The Select File dialog box appears.
5. Browse to the folder that you copied the original .RPT file to. By default, this folder is the C:\Program Files\GE Fanuc\Proficy iFIX\Local folder.
6. Select the file and click Open. A message box appears warning you that the imported user accounts will not contain passwords.

IMPORTANT: Be aware that you cannot import a security file exported from another language.

7. Click Yes to continue. Another message box appears requesting that you replace or add this file to the existing configuration.
8. Click Replace.

IMPORTANT: Do not shut down the SCU before moving on to the next set of steps. If you did not add passwords to the user accounts before you migrated, as described in the Adding Passwords to the .RPT File section, you could possibly lock yourself out, if security is enabled.

9. Continue by following the steps in the *Reconfigure the Application Features and Passwords for Each User* section.

Reconfigure the Application Features and Passwords for Each User

After you import the security configuration (.RPT) file, you can proceed to reconfigure the features available for each user and reassign new passwords, if you did not already do so.

Use the Security Configuration program to open each group profile and user profile, assign application features, and create a new password (if a password is required). Use the printout that you created in the Exporting a Report of the Security Configuration as a reference when reassigning the application features to users on the upgraded system. This printout lists the original application features available for each user.

Refer to the following sections when comparing this printed list of features with the features that appear in the Application Features Selection dialog box.

- Identical Application Features in FIX32 and iFIX with FIX Desktop
- FIX32 Application Feature Names That Are Different After the Upgrade
- FIX32 Application Features No Longer Available After the Upgrade
- New Application Features Available for iFIX Users

► To assign the application features and a password to each user:

NOTE: The SCU should still be open from the previous set of steps in the Import the Security Configuration section.

1. On the Configure menu, click Security. The Security Configuration application appears.
2. On the Security menu, click User Accounts.
3. Select a user and click Modify. The User Profile dialog box appears.
4. In the Password field, enter a new password if you want to assign a password.
5. Click the Modify button beneath the Application feature list (the list on the right-side of the window). The Application Feature selection dialog box appears.
6. Add the required features. Click Add All if you want to allow this user to use all application features.

See the sections that follow for information on the names used with each feature and the new features available.

7. Click OK.
8. Click OK to exit the User Profile dialog box.
9. Repeat steps 3-8 for each user listed in the User Accounts dialog box.
10. Click OK to exit the User Accounts dialog box.

11. On the Edit menu, click Group Accounts. The Group Accounts dialog box appears.
12. Select a group and click Modify. The Group Profile dialog box appears.
13. In the Application Features area, click Modify. The Application Feature selection dialog box appears.
14. Add the required features. Click Add All if you want to allow this group to use all application features.
15. Click OK.
16. Click OK to exit the Group Profile dialog box.
17. Repeat steps 12-16 for each group listed in the Group Accounts dialog box.
18. On the File menu, click Save to save the security configuration.
19. On the File menu in the Security Configuration program, click Exit to return to the SCU.
20. Save and exit the SCU.

Identical Application Features in FIX32 and iFIX with FIX Desktop

After you import your security configuration, the following application features are automatically imported for each user. You do not need to assign these features again after the upgrade since the same names are used for FIX32 and iFIX with FIX Desktop:

- Background Task Exit
- Database Reload
- Database Save
- Historical Trend Assign
- Historical Trend Collection
- Historical Trend Export
- Recipe Load
- Recipe Save
- Security Configuration
- System Configuration
- System User Login

- System User Logout
- Tag Group Editor

NOTE: While the Tag Group Editor applications may be different executables for Draw and the Proficy iFIX WorkSpace, they both use the same application feature.

FIX32 Application Feature Names That Are Different After the Upgrade

After you upgrade to iFIX with FIX Desktop, you will notice that some of the FIX32 features correspond to different names in iFIX with FIX Desktop. These features do not automatically appear in the user's application feature list. You need to add these again.

For instance, to allow a user to access Draw, you need to add the WorkSpace Configure feature to the user's application feature list. By doing this, the user has the same access to both Draw and the Proficy iFIX WorkSpace in configure mode.

Similarly, to allow access to the View application, you need to add the WorkSpace Runtime feature to the user's application feature list. By doing this, the user has access to both View and the Proficy iFIX WorkSpace in run mode.

The application feature names are different because they take into account changes to support the iFIX system. As another example, since the FIX32 Database Builder is replaced with the iFIX Database Manager, you need to add the Database Manager to the user's feature list since the supported application actually changed with the upgrade.

When re-assigning these features for each user, use the following table to locate the FIX32 feature name and determine the corresponding name in iFIX with FIX Desktop.

Feature Name for FIX32	Feature Name for iFIX with FIX Desktop
Database Builder, Database Create	Database Manager
Draw	WorkSpace Configure
View	WorkSpace Runtime
Report Creator	Fix32 - Report Creator
Key Macro Editor	Fix32 - Key Macro Editor
Operating System Window	Fix32 - Operating System Window
FIX - System Shutdown	iFIX - System Shutdown
Alarm Summary Display	Fix32 - Alarm Summary Display

Feature Name for FIX32	Feature Name for iFIX with FIX Desktop
Historical Trend Display	Fix32 - Historical Trend Display
Run a Task from View	Fix32 - Run a Task from View
Report Generator	Fix32 - Report Generator
Historical Display Configuration	Fix32 - Historical Display Configuration
Exit from View	WorkSpace Runtime Exit
Database Block Add/Delete	Database Block Add-Delete
GUI Recipe Builder Operations Window	Recipe Builder Operations Window
GUI Recipe Builder Development Window	Recipe Builder Development Window
GUI Recipe Save	Recipe Save from Recipe Builder
GUI Recipe Download	Recipe Download from Recipe Builder
GUI Recipe Upload	Recipe Upload from Recipe Builder
GUI Recipe Text Output	Recipe Text Output from Recipe Builder
GUI TASK Switching	Enable Task Switching
GUI System Reboot	Enable Ctrl-Alt-Del
Historical Trend Display View Only	Fix32 - Historical Trend Display View Only
CDA Feature 1 - 54	EDA Feature 1 - 54

FIX32 Application Features No Longer Available After the Upgrade

In iFIX with FIX Desktop, it is no longer applicable to include security for these features, many of which are FIX BOS related or discontinued:

- All features that begin with the word: Batch
- Data Transfer Utility
- Dial Manager for Modem Support
- Ingredient Manager
- Inventory Manager
- Procedure Monitor
- Procedure Monitor - Hold/Resume Control
- Procedure Monitor - Modify Parameters
- Procedure Monitor - Run/Skip Control
- Procedure Monitor - Stop Procedure
- Quality Test Manager
- Recipe Handler
- Recipe Manager
- Recipe Manager - Authorize
- Recipe Manager - Remove
- Report Manager
- Scheduler
- Scheduler Configuration

New Application Features Available for iFIX Users

By upgrading to iFIX with FIX Desktop, you also obtain some new features that you can assign to your iFIX users. The features that you can choose from include:

- Application Validator - Creation of Baselines
- Application Validator - Run-time Access
- Change Management
- Electronic Signature - Bypass

- Electronic Signature - Perform By
- Electronic Signature - Verify By
- GE Fanuc OEM Reserved 1-12
- Manual Failover
- Project Backup-Restore
- Recipe Text Output from Recipe Builder
- Runtime Visual Basic Editor Access
- Security Synchronizer
- Startup Profile Manager
- VisiconX Writes
- A group of Proficy Batch Execution product features available if you have this product installed (each feature starts with the word: Batch Execution)

For more detailed information on using these features with your iFIX pictures, refer to the iFIX Electronic Books.

NOTE: iFIX does not include a separate Key Macro Editor application feature. For iFIX, the Key Macro Editor (FDKeyMacros.exe) does not run outside of the Proficy iFIX WorkSpace. So, security for this feature is set at the Workspace-level by allowing access to the Workspace Configure feature. For FIX32, the Key Macro Editor (KME.exe) can run alone without Draw running. This is why the Key Macro Editor appears as a separate entry for FIX32 for use with FIX Desktop.

Redefine SCADA Failover Settings

If your FIX32 applications used the failover feature prior to the iFIX with FIX Desktop upgrade, you need to set up failover again. Be aware that, if you want to use failover, all nodes (primary, backup, and view nodes) must be upgraded to iFIX with FIX Desktop. FIX32 failover is incompatible with iFIX.

One of the biggest changes required for iFIX failover is that you include a logical node name in your configuration. Failover in iFIX follows a different paradigm. In iFIX with FIX Desktop, the applications on the iClient communicate to the logical node name, and iFIX substitutes the physical node name at run time based on which SCADA server is available. The combination of the logical node name, and physical primary and backup SCADA server names, is referred to as the primary and backup grouping. You configure the primary and backup grouping in the SCU of the iClient and of each SCADA server.

In other words, after you upgrade, you need to start the SCU and do the following:


- Define the local node name and local logical name in the Local Startup Definition dialog box on the primary and backup SCADA nodes.

Getting Started

- Define the remote node name, as well as the primary and backup server pair in the Network Configuration dialog box on the primary, backup, and view nodes.
- Define the partner SCADA in the SCADA Configuration dialog box on the primary and backup nodes.

You have two different options for the combination of Local, Logical, Primary, and Backup node names that you use in these dialog boxes after you upgrade. These options are detailed in the *Understanding Failover Options After Upgrading* section.

The following figure shows an example of these steps and the dialog boxes that you use from the SCU.

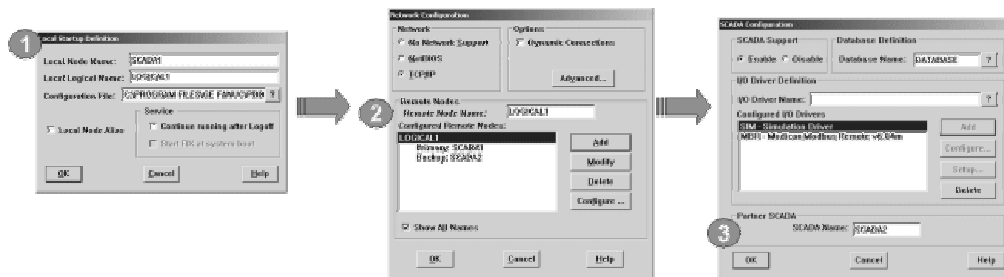

Overview of Failover Steps

The sections that follow detail how to configure these dialog boxes for either failover option you select:

- Steps To Configure Failover Option One
- Steps To Configure Failover Option Two

NOTE: For more detailed information on failover and LAN redundancy, refer to the *Mastering iFIX manual in the iFIX Electronic Books*.

Understanding Failover Options After Upgrading

To use failover and iFIX with FIX Desktop, you have two options for your current failover configuration. These options are described as follows.

Failover Configuration Option One

With this option, you first define a logical node name. You use the same primary and backup node names that you used in your FIX 7.x application. This configuration has the advantage of requiring no changes to pictures on the SCADA nodes, but the disadvantage is that all iClient pictures and tag group files will have to be updated to connect to the logical node name rather than primary node name, as in FIX32. This could be a significant effort depending upon the number of files you need to inspect. See the *Steps To Configure Failover Option One* section for more details.

Failover Configuration Option Two

With this option, you use the name of the primary SCADA server from your FIX 7.x application as your logical name. Since the logical node name and primary node name cannot be the same, you then must then rename the node name for the primary SCADA. The backup node name remains the same.

This configuration has the advantage of requiring no changes to pictures on the remote nodes, but anything which directly references the primary SCADA node, such as NSD tags, must be updated. See the *Steps To Configure Failover Option Two* section for more details.

Example of Failover Option One

The following graphic shows an example of how the failover settings for FIX32 differ from the iFIX failover settings when you use Option One.

FIX32 Failover

Primary Server	SCADA1
Backup Server	SCADA2

iFIX Failover

Logical Node Name	SCADA
Primary Server	SCADA1
Backup Server	SCADA2

Example of Failover Option One

In this example, notice that the iFIX settings includes a logical node name, SCADA. This logical node name is a new name, not used in the FIX32 failover settings. The names for your iFIX primary server SCADA1, and backup server SCADA2, remain the same as the FIX32 names.

See the *Steps To Configure Failover Option One* section for more details on how to set this configuration up in your SCU.

Steps To Configure Failover Option One

To define a new logical name and configure the backup and primary grouping using the same names as FIX 7.x, refer to the following steps.

► To configure failover option one:

1. Click the Start button and point to Programs, and then Proficy HMI SCADA - iFIX, and click System Configuration to open the SCU.
2. On the Configure menu, click Local Startup. The Local Startup Definition dialog box appears.
3. In the Logical Node Name field, enter a name. Be sure that this name is different than the local node name.
4. Leave the name in the Local Node Name field unchanged.
5. Click OK.
6. On the Configure menu, click Network. The Network Configuration dialog box appears.
7. Select TCP/IP as the network type.

NOTE: The automatic failover option requires a TCP/IP network; it does not work with NetBIOS.

8. In the Remote Node Name field, enter the logical node name from step 3.
9. Click Add. The logical name appears in the Configured Remote Nodes list box.
10. Select the node that you just added, and click Configure. The Remote Node Configuration dialog box appears.
11. Select the Enable Logical Node Names check box.
12. In the Primary Node field, enter the primary node that you used in your FIX 7.x configuration.
13. In the Backup Node field, enter the backup node that you used in your FIX 7.x configuration.

NOTE: If you do not remember the Primary or Backup names, refer to the *Nodename.rpt* file that you created in the Generating a System Configuration Report section. This report lists the node name and its partner node. The Primary and Backup names must be different than the logical node name.

14. Click OK.
15. On the Configure menu, click SCADA. The SCADA Configuration dialog box appears.
16. Enter the name of the SCADA server with which this node is paired. For the primary server, this is the name of the backup node name that you used in FIX 7.x. For the backup server, this is the name of the primary server. Refer to the names you entered in steps 12 and 13.
17. Repeat steps 1-16 on the backup SCADA server. Use the same logical, primary, and backup node names that you used for the primary node. The Local Node Name field (in step 4), as well as Partner node name field (in step 16), should be different, however.

NOTE: For failover to work, the logical node name, primary node name, and backup node name should be the same on all SCADA nodes.

18. Repeat steps 6-14 for each View node.

Example of Failover Option Two

The following graphic shows an example of how the failover settings for FIX32 differ from iFIX when you use Option Two.

FIX32 Failover

Primary Server	SCADA1
Backup Server	SCADA2

iFIX Failover

Logical Node Name	SCADA1
Primary Server	SCADAP
Backup Server	SCADA2

Example of Failover Option Two

In this example, notice that the iFIX settings includes a logical node name, SCADA1. The logical node name is the same name that you assigned to the primary server in FIX32. The iFIX primary server uses a new name, SCADAP. The backup server name, SCADA2, remains the same.

Steps To Configure Failover Option Two

To define a logical name (using your primary SCADA name from FIX 7.x) and reconfigure the backup and primary grouping, refer to the following steps.

► To configure failover option two:

1. Click the Start button and point to Programs, and then Proficy HMI SCADA - iFIX, and click System Configuration to open the SCU.
2. On the Configure menu, click Local Startup. The Local Startup Definition dialog box appears.
3. In the Logical Node Name field, enter the name that you used for the primary node name on your FIX 7.x system.

If you do not remember this name, refer to the *Nodename.rpt* file that you created in the *Generating a System Configuration Report* section. This report lists the node name and it's partner node. In this step you are basically moving the Local Node Name field to the Logical Node Name field.

4. In the Local Node Name field, enter a new name.
5. Click OK.
6. On the Configure menu, click Network. The Network Configuration dialog box appears.
7. Select TCP/IP as the network type.

NOTE: The automatic failover option requires a TCP/IP network; it does not work with NetBIOS.

8. In the Remote Node Name field, enter the logical node name from step 3.
9. Click Add. The logical name appears in the Configured Remote Nodes list box.

10. Select the node that you just added, and click Configure. The Remote Node Configuration dialog box appears.
11. Select the Enable Logical Node Names check box.
12. In the Primary Node field, enter the new node name from step 4.
13. In the Backup Node field, enter the backup node name that you used in FIX 7.x.


If you refer back the *Nodename.rpt* file again, this node is referenced in the SCADA configuration as the partner node.
14. Click OK.
15. On the Configure menu, click SCADA. The SCADA Configuration dialog box appears.
16. Enter the name of the SCADA server with which this node is paired. For the primary server, this is the name of the backup node name that you used in FIX 7.x. For the backup server, this is the name of the primary server. Refer to the names you entered steps 12 and 13.
17. Repeat steps 1-16 on the backup SCADA server. Use the same logical, primary, and backup node names that you used for the primary node. The Local Node Name field (in step 4), as well as Partner node name field (in step 16), should be different, however.

NOTE: For failover to work, the logical node name, primary node name, and backup node name should be the same on all SCADA nodes.

18. Repeat steps 6-14 for each View node.

Enable Environmental Protection

If your FIX applications used the environment protection feature prior to the iFIX with FIX Desktop upgrade, you need to enable it again. To enable this feature for iFIX and FIX Desktop, use the Environment Protection tab of the User Preferences dialog box of the Proficy iFIX Workspace, as shown in the following figure.

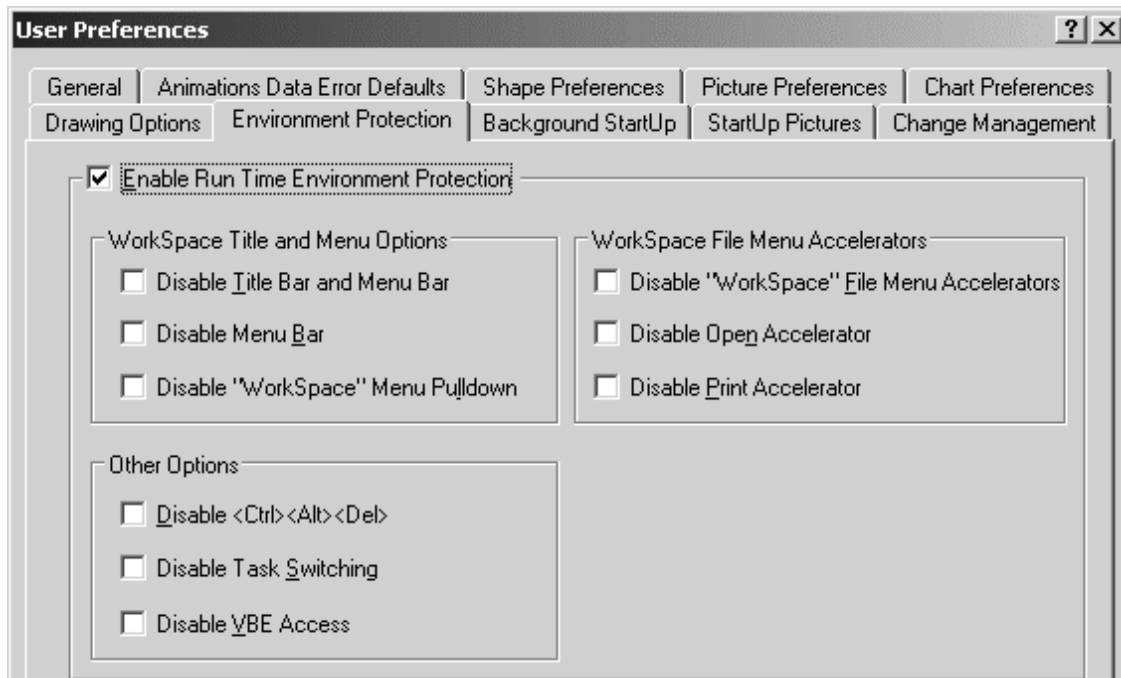

Environment Protection Options in the Proficy iFIX WorkSpace

From this dialog box, you can enable the options that your applications require. When re-entering these settings, be sure to refer back to the settings that you recorded in the *Checking the Environmental Protection Settings* section, when you prepared for the iFIX with FIX Desktop upgrade.

Important Note About Using Environment Protection

When you use environmental protection for iFIX with FIX Desktop, be aware that some limitations apply to these options when View is running and the Proficy iFIX WorkSpace is in run mode:

- Disable <Ctrl><Alt>
- Disable Task Switching

If you exit the WorkSpace or View, either by shutting down one application or by switching the WorkSpace to configure mode while View is still running, these environmental protection settings no longer apply to the application still running.

Understanding Environment Protection in iFIX

When you upgrade to iFIX with FIX desktop, there are environmental protection settings that apply to both iFIX and View. There is also a FIX32 environmental protection setting that is unavailable after the upgrade. However, with the upgrade, there are also new settings now available in the Proficy iFIX WorkSpace. The sections that follow describe these changes.

Settings that Apply to Both the Proficy iFIX WorkSpace and View

From the Environment Protection tab of the User Preferences dialog box, the following settings apply to both View and WorkSpace in run mode:

- Disable Title Bar and Menu Bar
- Disable Menu Bar
- Disable <Ctrl><Alt>
- Disable Task Switching

FIX32 Setting Still Available After the Upgrade

The only environmental protection setting that does not appear in the Environment Protection tab of the User Preferences dialog box is as follows:

Disable Pop-up Menu

This setting is still available for FIX Desktop View, however, you must enable this setting through the FixUserPreferences.INI file.

New Settings for the Proficy iFIX WorkSpace

The remaining environmental protection options are new for the Proficy iFIX WorkSpace:

- Disable "WorkSpace" Menu Pulldown
- Disable VBE Access
- Disable "WorkSpace" File Menu Accelerators
- Disable Open Accelerator
- Disable Print Accelerator

For more details on these settings, refer to the table in the *Understanding Environment Protection* section.

Steps to Enable Environment Protection

The following steps explain how to enable environment protection feature after you upgrade.

► To enable the environment protection feature after you upgrade:

1. Start iFIX.
2. Shut down View and the WorkSpace if either is running.
3. If you want to use the Disable Pop-up Menu option, open the FixUserPreferences.ini file in the C:\Program Files\GE Fanuc\Proficy iFIX\Local folder. In the [AppRunPreferences] section, make the following change:

```
PopUpMenu=0
```

When the PopUpMenu=1, then the right-click pop-up menu is not available. When this value is set to 0, the pop-up menu is available in View.

4. To set the other environment settings, open the Proficy iFIX WorkSpace.
5. On the WorkSpace menu, click User Preferences. The User Preferences dialog box appears.
6. Select the Environment Protection tab.
7. Select the Enable Run Time Environment Protection check box. After you enable this setting, the check boxes below become available.
8. Select the options that you want to enable. Use the table in the *Understanding Environment Protection* section as a guide when assigning these options.

NOTE: After you enable the environment protection feature in WorkSpace, you must shutdown View (if it is still running) and restart it for the environmental protection settings to apply.

Understanding Environment Protection

The following table outlines common tasks you may want to restrict operators from doing in the run-time environment, and the environmental option associated with each task.

To restrict an operator from...	Select this check box...
Closing the current picture displaying in View or the Proficy iFIX WorkSpace (in run mode).	Disable Title Bar and Menu Bar. NOTE: Be sure to also select the Full Screen in Run mode check box from the General tab and clear the Title bar and Resizable check boxes from the Picture Preferences tab.
Switching from View or the Proficy iFIX WorkSpace (in run mode) to another application that may be running.	Disable Task Switching
Restarting the computer using Ctrl+Alt+Del or logging out of Windows when running View or the Proficy iFIX WorkSpace (in run mode).	Disable <Ctrl><Alt>
Using the Proficy iFIX WorkSpace menu or switching to the configuration environment (while in run mode).	Disable "WorkSpace" Menu Pulldown
Accessing the Visual Basic Editor from the Proficy iFIX WorkSpace (in run mode).	Disable VBE Access.

To restrict an operator from...	Select this check box...
run mode).	
Using the Ctrl+O or Ctrl+P shortcuts in the Proficy iFIX WorkSpace (while in run mode).	Disable "WorkSpace" File Menu Accelerators
Using the Ctrl+O shortcut in the Proficy iFIX WorkSpace (while in run mode).	Disable Open Accelerator
Using the Ctrl+P shortcut in the Proficy iFIX WorkSpace (while in run mode).	Disable Print Accelerator

Setup the Report Generator

If you used the Report Generator prior to upgrading to iFIX with FIX Desktop, and want to use the Report Generator on the upgraded system with Office 2000 or later, be sure to obtain and install SIM (software improvement module) number WAAE2371.

You can obtain more information on this SIM and the files associated with it from the Proficy GlobalCare Support web site, <http://globalcare.gefanuc.com/downloads/sims/>. This SIM was also available for FIX 7.x.

If you are unsure if this SIM was installed before the upgrade, you can reinstall it.

► To install the files associated with this SIM:

1. Copy the new file VDA2000.XLA to the directory in which your current Report Generator files exist.
2. Copy the REPRTLNK.XLA, HIST_OPN.XLA and GEN.XLA files to the directory in which your current Report Generator files exist. REPRTLNK.XLA and GEN.XLA replace the existing Report Generator files which shipped with iFIX 4.0.
3. Copy the STARTUP.XLA file to the directory in which your Excel Startup Directory exists. STARTUP.XLA replaces the existing Report Generator files which shipped with iFIX 4.0.

See the Proficy GlobalCare Support web site for more details.

Other iFIX Installation Considerations

This chapter provides information you need to consider when using databases or drivers and iFIX. This information includes:

- Supported Drivers
- Special Keyboard Buttons

Supported Drivers

iFIX supports the following drivers:

- Version 6.x
- Version 7.1 or higher

Version 7.01 drivers have known issues with iFIX and are not supported.

Special Keyboard Buttons

Some computer keyboards have special buttons for e-mail launch, internet launch, search, and other functions. These keyboard buttons may disable certain key macros or allow users to circumvent iFIX security measures.

GE Fanuc recommends that you reprogram or disable the software that operates such special buttons. Refer to your computer's documentation for instructions on disabling these buttons.

Networking

This chapter provides general information about iFIX-supported networks, supported network software, supported file servers, and installing network cards with Windows. Refer to the following sections for more information:

- Supported Networks
- Supported File Servers
- Handling Time Zones when Using Networked FIX 6.15 and iFIX Nodes
- Networking with Other iFIX and FIX Nodes

Supported Networks

If you decide to implement a networked iFIX system, make sure that all nodes are using compatible network configurations. In Windows 2000, iFIX supports the NetBIOS and TCP/IP interfaces for peer-to-peer communications. In Windows XP and Windows Server 2003, iFIX supports only TCP/IP interfaces. GE Fanuc has tested and recommends 3COM plug-in boards and built-in network adapters from Compaq, Dell, and Gateway.

If you have difficulty networking your computer, refer to the *Troubleshooting* chapter of the *Setting Up the Environment* manual to pinpoint and resolve your problems.

Supported Network Software List

GE Fanuc recommends and supports the network software that is provided by Microsoft Windows. The following table lists the supported software that provides the network interface and the sections that contain setup instructions for the software. The software can be combined with Compaq, Dell, or Gateway network adapters to provide a complete networking solution.

Network Software	
For the network software...	Refer to the section in the <i>Setting Up the Environment</i> manual...
TCP/IP	Working with TCP/IP
NetBIOS	Working With NetBIOS <i>IMPORTANT: Be aware that iFIX only supports the use of NetBIOS in Windows 2000. Microsoft discontinued support for NetBIOS in Windows XP and Windows Server 2003.</i>

Supported File Servers

GE Fanuc supports using a file server to store System Configuration Utility, alarm area database, security, historical, and recipe data files and file server-based iClients. iFIX does not require a file server.

The following operating systems for file servers are recommended:

- Microsoft Windows 2000 Server/Advanced Server.
- Microsoft Windows Server 2003.
- Novell NetWare. If you use a NetWare file server, GE Fanuc recommends that you use Microsoft's Client Service for NetWare on your iFIX node.

Refer to your file server documentation for installation and configuration instructions.

If a file server becomes unavailable and an iFIX node attempts to access a file, you may experience no

response, slow response, or time-outs. These conditions are a result of continuously polling all available drives while it waits for a response from the file server. It is recommended that you store a backup copy of the files you need on the local node. GE Fanuc does not recommend using the file server for files if it is susceptible to failure.

Handling Time Zones when Using Networked FIX 6.15 and iFIX Nodes

In FIX 6.15, time zones are ignored when passing alarms over the network. For example, if a FIX 6.15 node in Boston (Eastern Standard Time), generates an alarm at 4:00 PM, then a FIX 6.15 node in Chicago (Central Standard Time) displays that alarm with a time stamp of 4:00 PM.

By comparison, iFIX uses time zones and adjusts the time stamp accordingly. For example, if an iFIX node in Boston generates an alarm at 4:00 PM, another iFIX node in Chicago displays the alarm with a time stamp of 3:00 PM.

When FIX 6.15 and iFIX transfer alarms over the network, the time zone handling is similar to FIX 6.15 as the following table shows.

When...	Then...
A FIX 6.15 node in Boston generates an alarm at 4:00 PM	An iFIX node in Chicago displays the alarm with a time stamp of 4:00 PM.
An iFIX node in Boston generates an alarm at 4:00 PM	A FIX 6.15 node in Chicago displays the alarm with a time stamp of 4:00 PM.

Networking with Other iFIX and FIX Nodes

iFIX 4.0 can share data and alarms with previous versions of iFIX, as well as with FIX32 6.15 and FIX v7.0. FIX32 view nodes will only receive alarms from alarm areas A-P.

IMPORTANT: You cannot run iFIX and FIX v7 at the same time on a single computer.

Index

.	
.CSV files.....	29
.RCX file.....	29
.RCX files	40
.RCY file.....	29
.RCY files	40
.RPT File.....	33
A	
ActiveWindow object	27
adding passwords to .RPT file	33
Advanced Historian, not supported with iFIX	26
B	
backing up FIX files	31
backup, file server files.....	58
buttons, special keyboard.....	57
C	
color mapping errors.....	27
computers, recommended for iFIX	3
D	
Database Dynamos	
iFIX installation	27
updating	26
database migration	40
date format, supported	10
demo mode troubleshooting.....	7
disabling iFIX as a service.....	12
disk space requirements	4
driver configuration, exporting	29
E	
environment protection.....	30
exporting	
driver configuration	29
security configuration report.....	33
F	
failover	
after upgrading to iFIX with FIX Desktop	47
understanding	48
failover configuration	
option one described.....	48
option one example.....	49
option one steps	49
option two described.....	48
option two example	50
option two steps.....	51
file server.....	58
FIX	
files, restoring after upgrade.....	37
I/O driver configuration.....	38
FIX 6.15, time zone considerations	59
FIX 7.0,starting after installing iFIX	17
FIX 7.x	
drivers.....	17
using with iFIX.....	17
FIX Desktop	28
FixUserPreferences.ini	4
format, time and date	10
FreeDiskSpace parameter	4
functionality conversion, Database Dynamos	36
G	
getting started, iFIX.....	1
H	
hardware	
optional.....	20
requirements for iFIX	2
hardware key	
described.....	5

hardware key (<i>cont.</i>)	
installing	5
parallel port	5
recovery for improper installation	5
replacing defective	8
serial number	5
troubleshooting	7
upgrading	22
USB port	5
hardware requirements	
memory	4
recommended computers	3
I	
I/O drivers	
preparing for upgrade	29
verifying upgrade and database migration	40
iFIX	
hardware requirements	2
installation failure	28
memory requirements	4
new title bar	25
online registration	17
optional hardware	20
paths	12
picture compatibility	26
recommended computers	3
recommended file servers	58
recommended video drivers	11
regional settings	10
resolving displays	26
software requirements	9
supported drivers	57
supported file servers	58
supported networks	58
upgrading from iFIX 2.5 and earlier	22
using with FIX	17
using with Microsoft Office	18
iFIX 2.5, upgrading from	22
iFIX environment, iFIX nodes	2
iFIX installation	2
iFIX SIMs	36
iLicense file	22
imported toolbars	25
importing	
recipe files	40
security configuration	41
installing iFIX	
after uninstalling iVisualize	18
newest drivers	36
product hardware key	5
with FIX v7	17
insufficient disk space	4
K	
keyboard, special buttons	57
M	
memory	
optimizing	11
requirements	4
Microsoft Office and iFIX	18
N	
networked FIX 6.15 and iFIX nodes	59
networks	58
new user	1
O	
Office 2000	56
optimizing virtual memory	11
optional hardware for iFIX	20
overview	
iFIX installation	2
upgrading from iFIX to FIX Desktop	35
P	
parallel port hardware key	5
passwords	
in .RPT file	33

passwords (<i>cont.</i>)	
reconfiguring.....	42
passwords.....	42
PDB folder.....	29
pictures	
compatibility in earlier versions of iFIX.....	26
converting from FIX to iFIX.....	26
created in an older version of iFIX	27
from iFIX 2.1	27
preparing for iFIX with FIX Desktop upgrade	28
preserving settings when upgrading.....	23
Process Database	36
Proficy GlobalCare Support web site	36
Proficy Historian and iFIX	25
R	
RCC folder.....	29
RCM folder.....	29
Recipe Builder	40
recipe files.....	29
reconfiguring passwords after upgrade to FIX	
Desktop.....	42
recovery, improper USB key install.....	5
registration for iFIX.....	17
Report Generator	56
reports	
security configuration	33
system configuration.....	34
requirements	
iFIX hardware.....	2
iFIX software	9
memory	4
resolving iFIX displays.....	26
restoring backed up files	37
running iFIX as a service	12
S	
SCADA failover settings	47

security configuration	
exporting.....	33
importing	41
Security.RPT	33
SIM.....	56
software requirements	9
special keyboard buttons	57
starting up FIX 7.0 after iFIX install	17
supported	
file servers	58
iFIX drivers	57
networks	58
system configuration report.....	34
System Configuration Utility.....	29
T	
time format, supported.....	10
time zones.....	59
toolbars, imported.....	25
U	
upgrading	
from FIX 7.x.....	35
hardware key	22
iFIX permissions	26
older pictures	27
preserving settings.....	23
to iFIX with FIX Desktop.....	28
USB hardware key	
described.....	5
recovery from improper install	5
user globals, iFIX upgrade considerations.....	26
using iFIX with Microsoft Office	18
V	
verifying I/O driver and database migration.....	40
video drivers.....	11
virtual memory	11

W

WAAE2371 SIM56

Windows virtual memory 11

Windows XP windows styles 26